30 / 50

H

W

W+90

when using
Carisa radiator
valves

Keep min. 100mm

NEMO

FITTING INSTRUCTIONS

carisa®

Key		Component	Qty
	A	Bleeding Valve Key	**1**
	B	Bleeding Valve 1/2"	**1**
	C	Blind Tap	**1**
	D	Friction Cups/Cushions	**4**
	E	Left Bracket	**2**
	F	Right Bracket	**2**
	G	Screw-5,5x45mm	**8**
	H	Wall Plug	**8**

65

45

Assembly Instructions

Fit bleending valve (B) & blind tap (C).

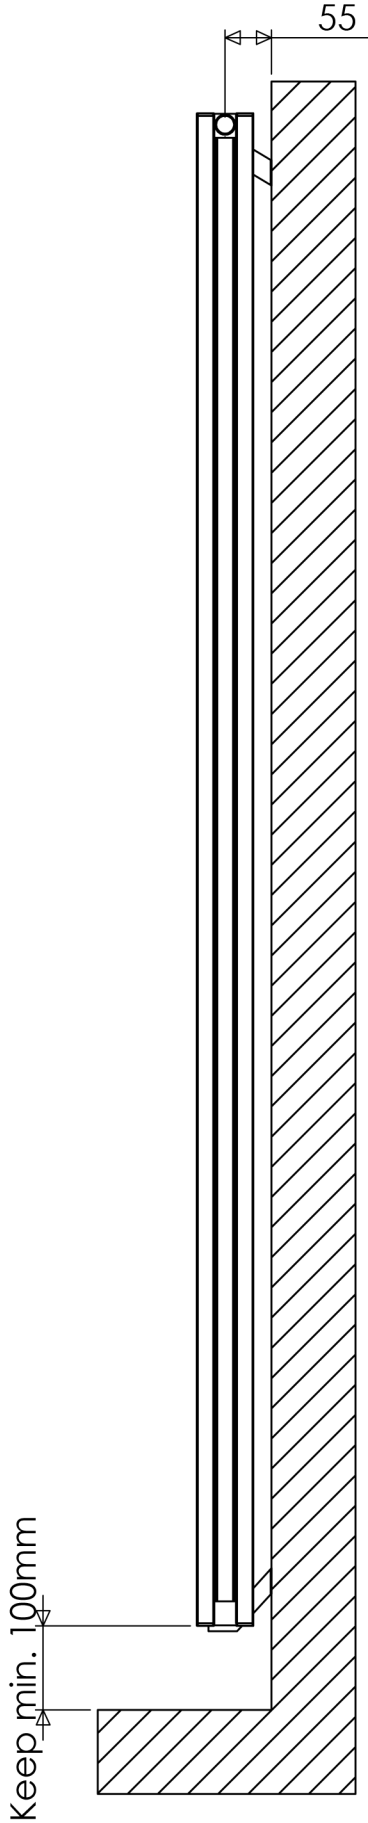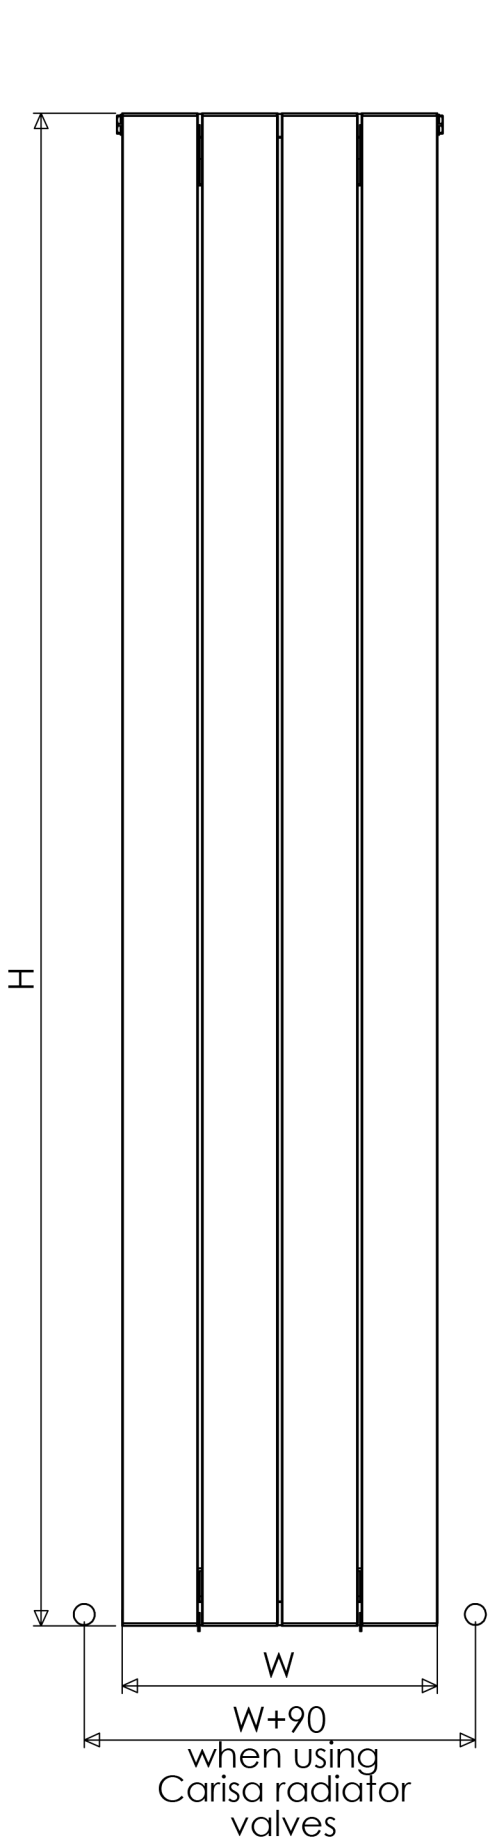Use Carisa bleeding valve key (A) to turn bleeding valve (B).

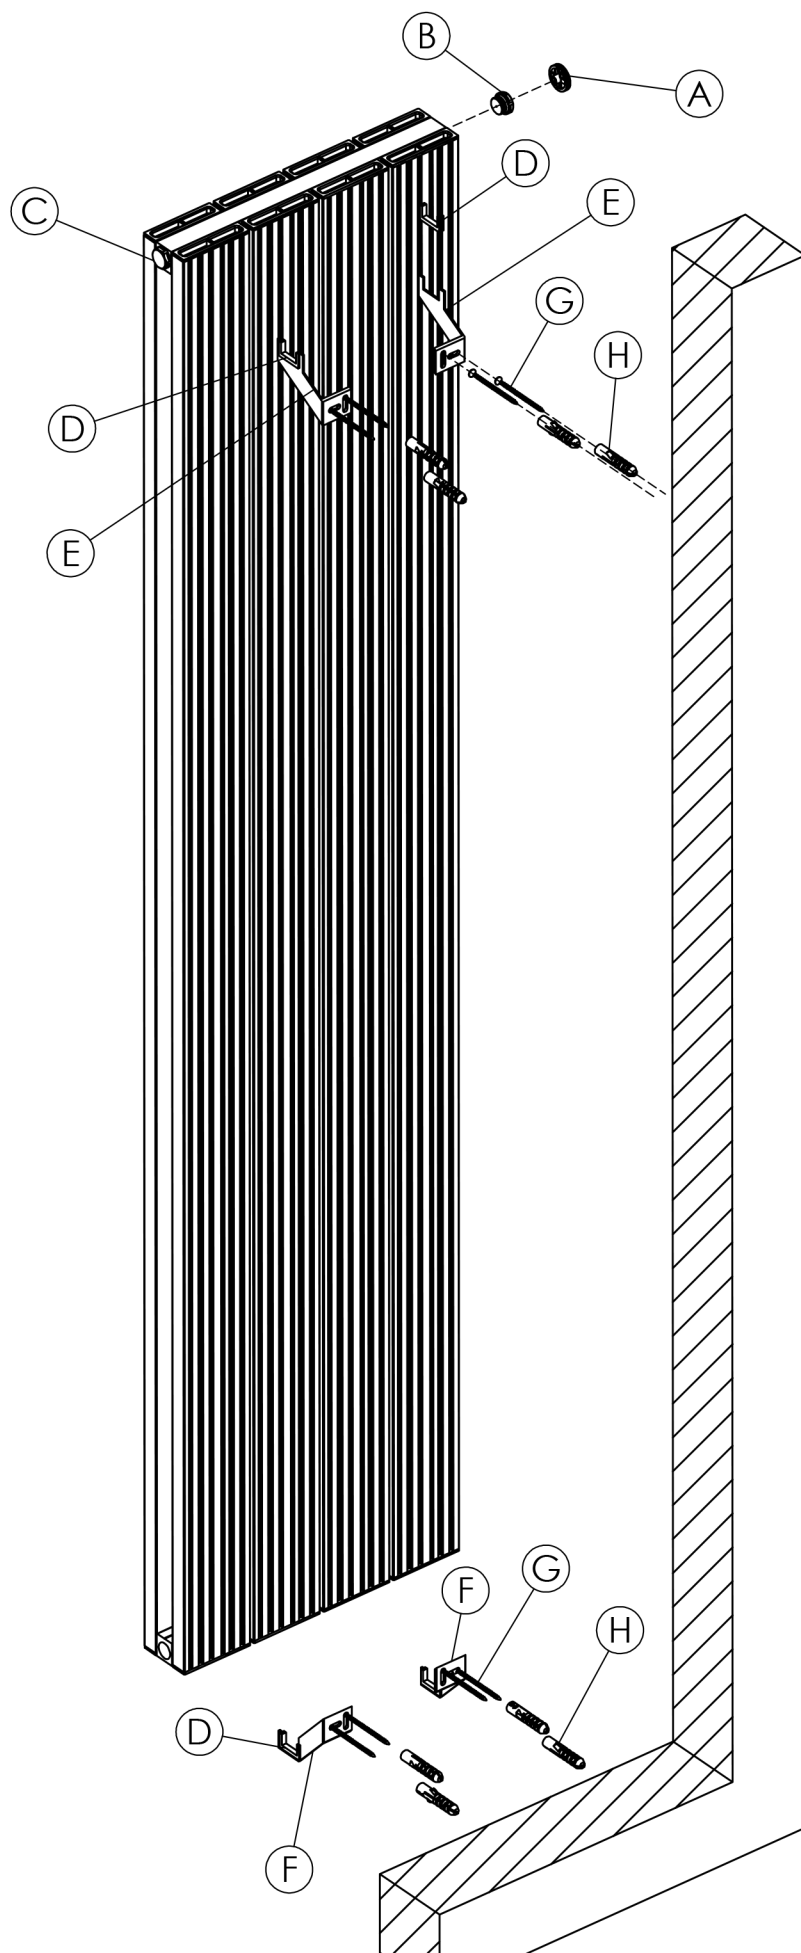Accurately mark out bracket holes on wall using spirit level.

Drill four 8mm diameter holes for upper brackets (E) and four 8mm diameter holes for bottom brackets(F).

Friction cups (D) MUST be fitted to each mounting brackets (E,F) to suppress potential noise.

Screw brackets (E,F) into wall plugs (H) with 5,5mm diameter x 45mm screws (G).

Hang radiator by sliding the bosses on the back of the radiator into brackets (E,F).

carisa

55

H

W

W+90
when using
Carisa radiator
valves

Keep min. 100mm

FITTING INSTRUCTIONS

carisa

Key	Component	Qty
A	Bleeding Valve Key	**1**
B	Bleeding Valve 1/2"	**1**
C	Blind Tap	**1**
D	Friction Cups/Cushions	**4**
E	Upper Bracket	**2**
F	Lower Bracket	**2**
G	Screw-5,5x45mm	**8**
H	Wall Plug	**8**

Assembly Instructions

Fit bleending valve (B) & blind tap (C).

Use Carisa bleeding valve key (A) to turn bleeding valve (B).

Accurately mark out bracket holes on wall using spirit level.

Drill four 8mm diameter holes for upper brackets (E) and four 8mm diameter holes for bottom brackets(F).

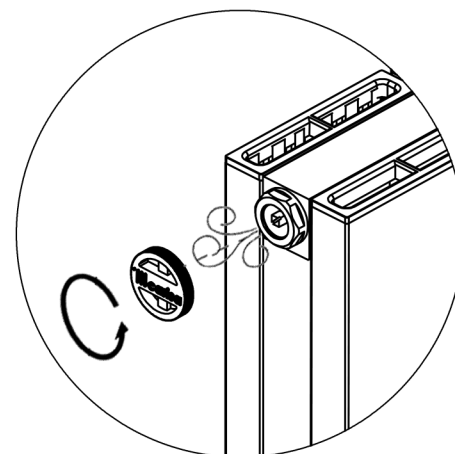Friction cups (D) MUST be fitted to each mounting brackets (E,F) to suppress potential noise.

Screw brackets (E,F) into wall plugs (H) with 5,5mm diameter x 45mm screws (G).

Hang radiator by sliding the bosses on the back of the radiator into brackets (E,F).