


**DİKKAT !!!**

**RANZA KURULUM KILAVUZU - BUNK BED ASSEMBLY**


**MONTAJ ESNASINDA VİDALARI SIKMADAN SADECE TUTTURUNUZ, ÜRÜN KURULUMU BİTTİKTEN SONRA VİDALARIN TAMAMINI SIKINIZ.**

**CAUTION !!!**


**KEEP THE SCREWS WITHOUT TIGHTENING DURING INSTALLATION, TIGHTEN THE SCREWS AFTER THE PRODUCT SETUP IS FINISHED.**

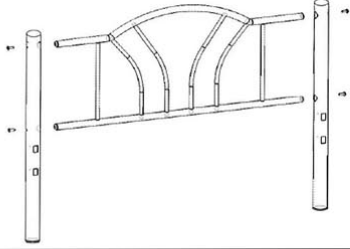


1

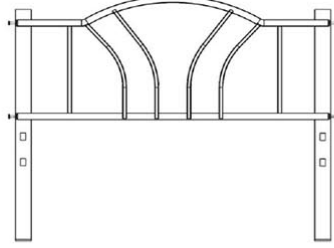


2

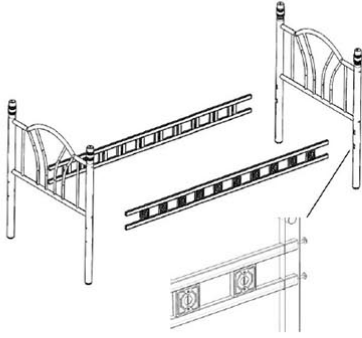


3

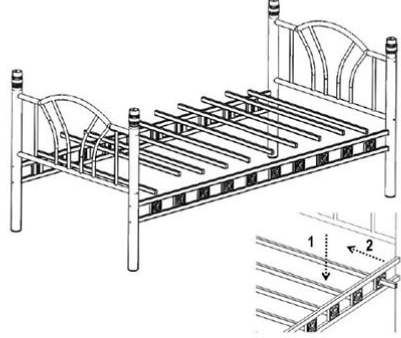


4

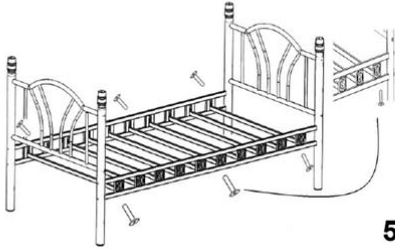


5

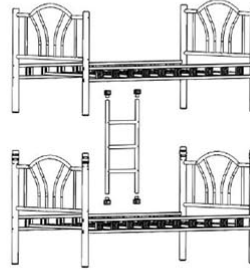

6

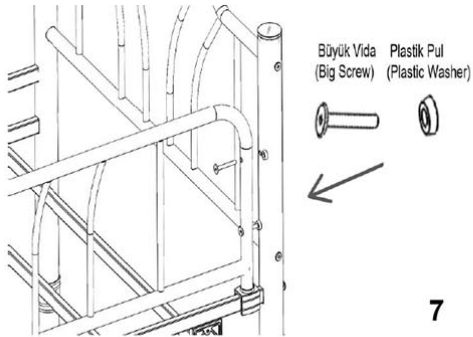

7

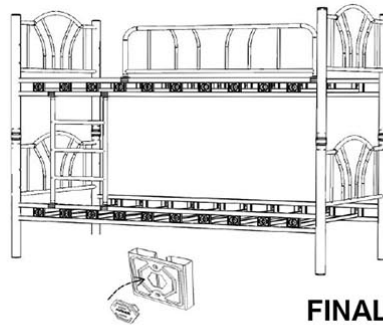

FINAL