



TETA HOME MONTAJ ŐEMASI NAPOLİ ALT DOLAP

1	PLASTİK KAVALE	
2	MİNİFİKS GÖVDESİ	
3	DÜBELLİ MIL	
4	PLASTİK DÜBEL	
5	MENTEŐE	
6	VİDA 3.5x18	
7	MİNİFİKS TIPASI	
8	VİDA 5x70	
9	ASKI TAKIMI	
10	ASKI ELEMANI KAPAĐI VE PULU ÜST DOLAP AKSESUARİ	
11	RAF PİMİ	



Not: Aksesuar (kulp,ray vb.) genel görünüm amaçlı olup katalog görünümünden farklı olabilir.

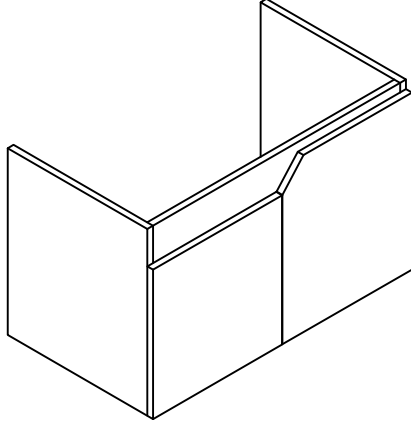

1

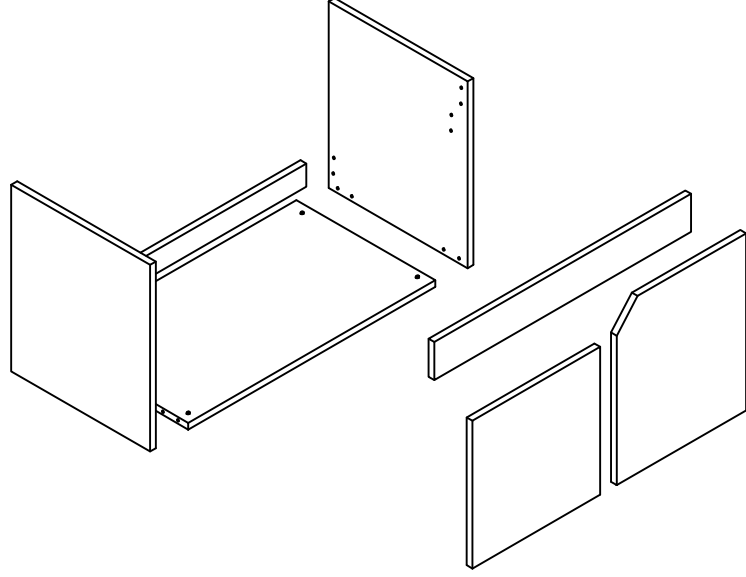


2

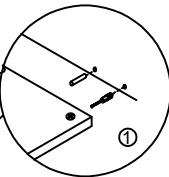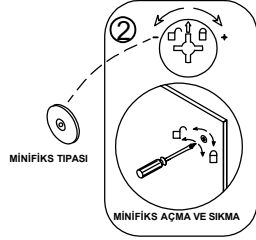

3

BELİRLEDİĐİNİZ UYGUN YERE ASKI ELEMANINI SABİTLEYİN.MATKAP İLE DUVARA DELİK AÇIN.DUBELİ DUVARA ÇAKIN VE SABİTLEYİN.

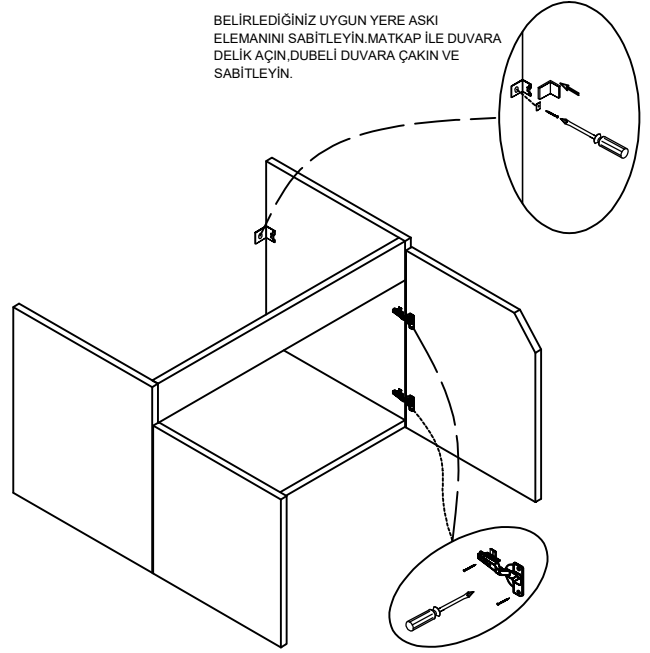

MENTEŐELERİ YERLEŐTİRİN VE SABİTLEYİN.