

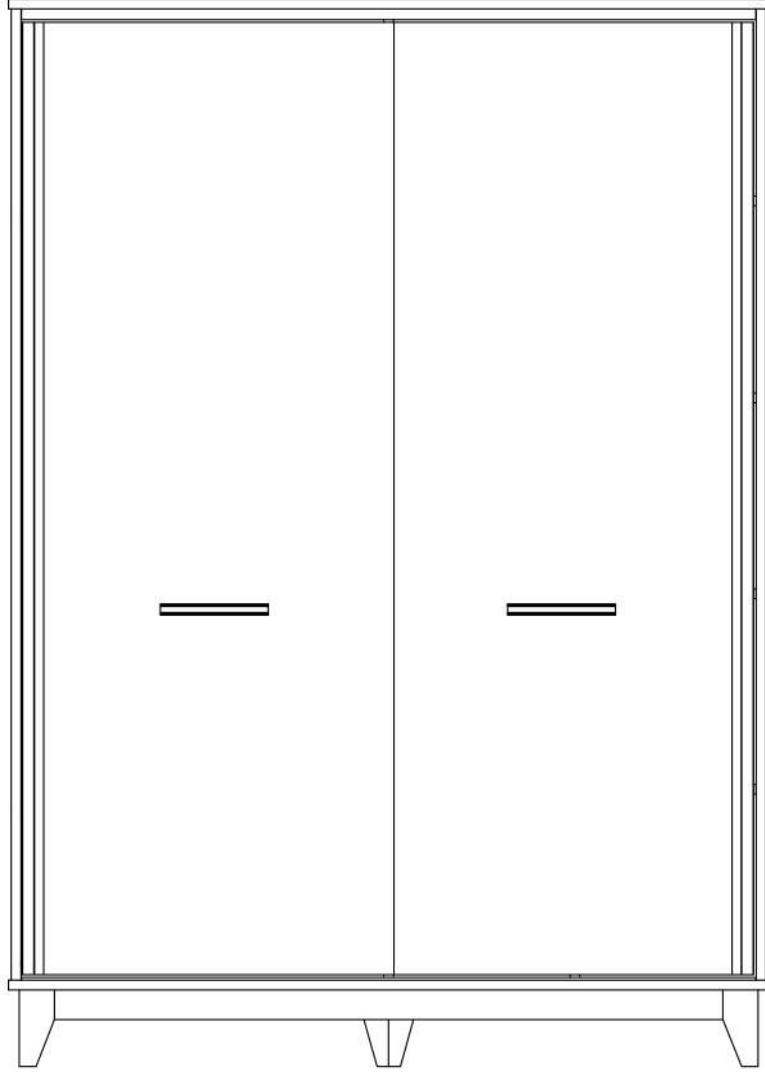
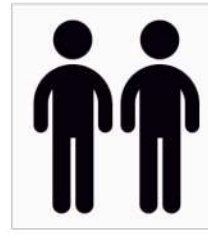
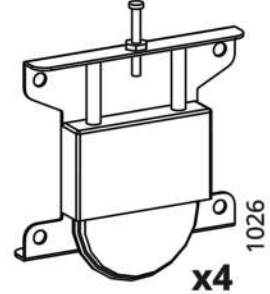
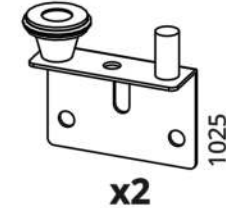
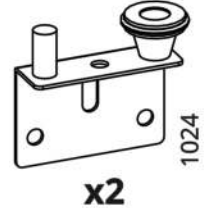

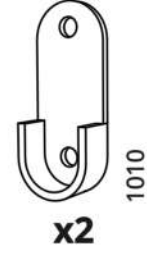


# SÜRGÜLÜ DOLAP





## SLIDING DOORS CABINET





ilknurbebe

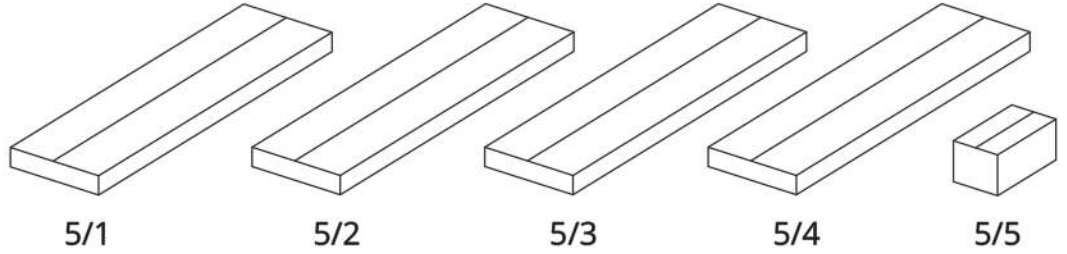







5/1

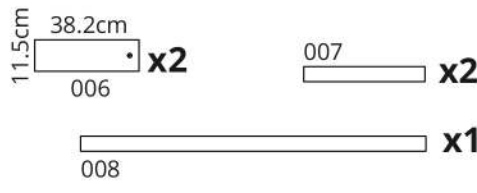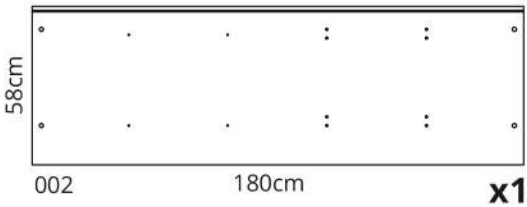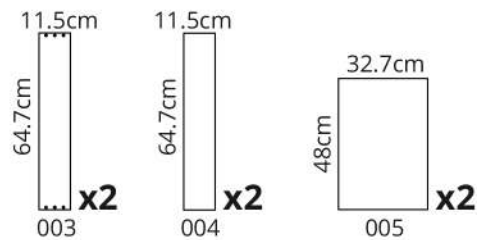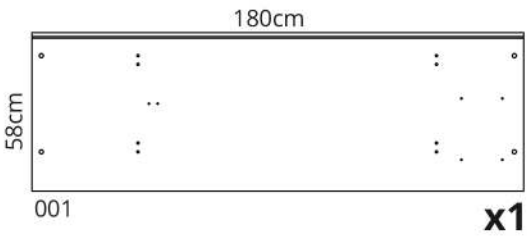



5/3

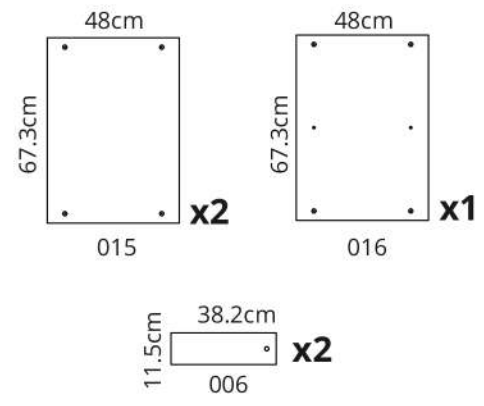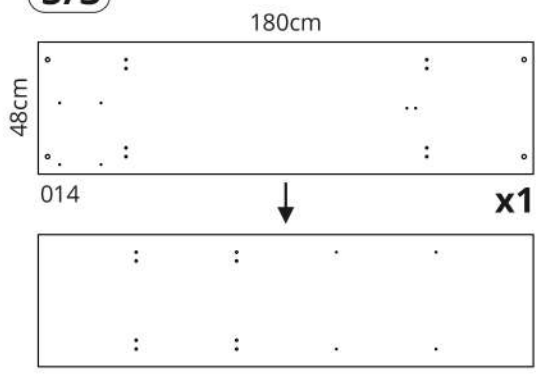




5/2

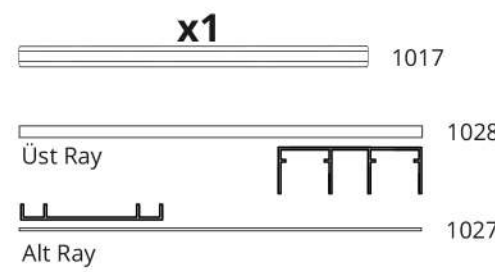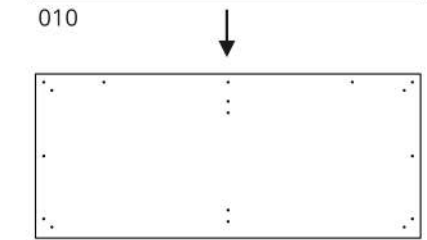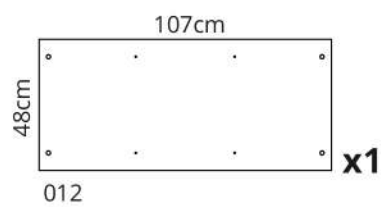
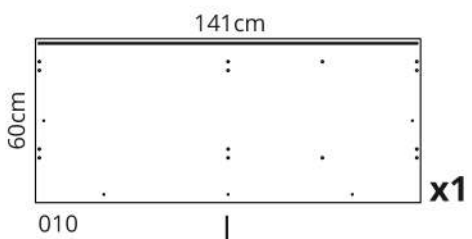
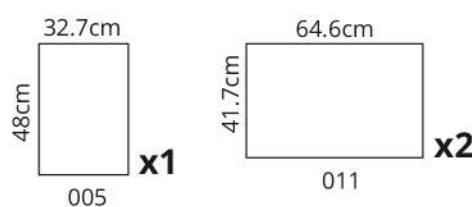
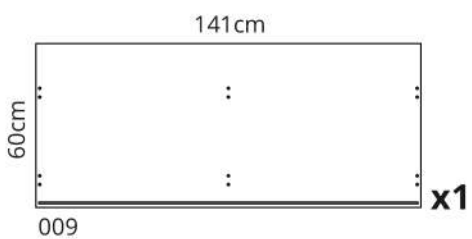


5/4

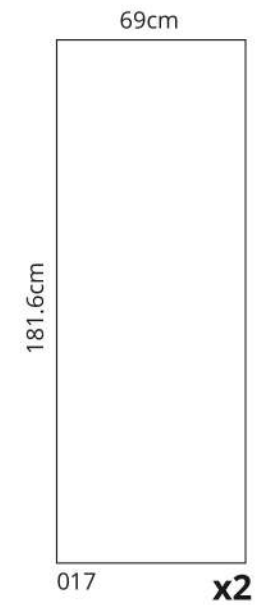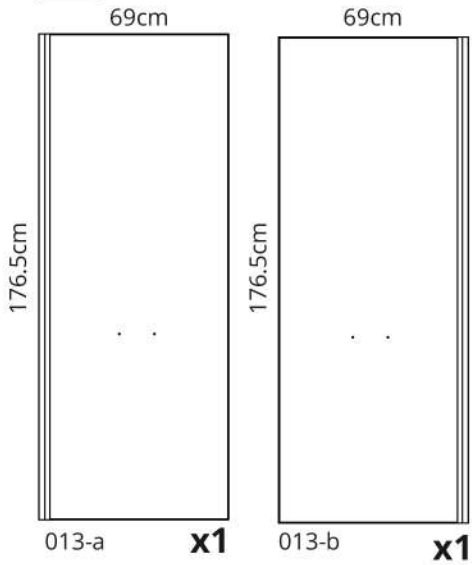


5/5

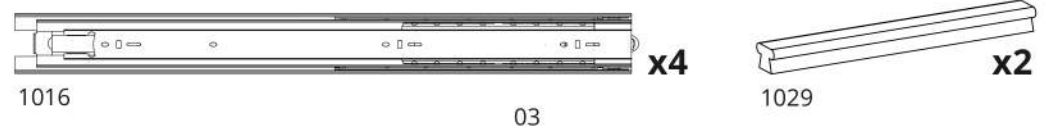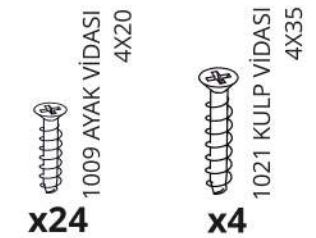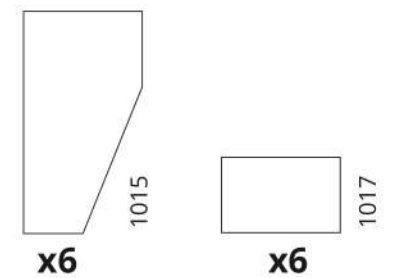


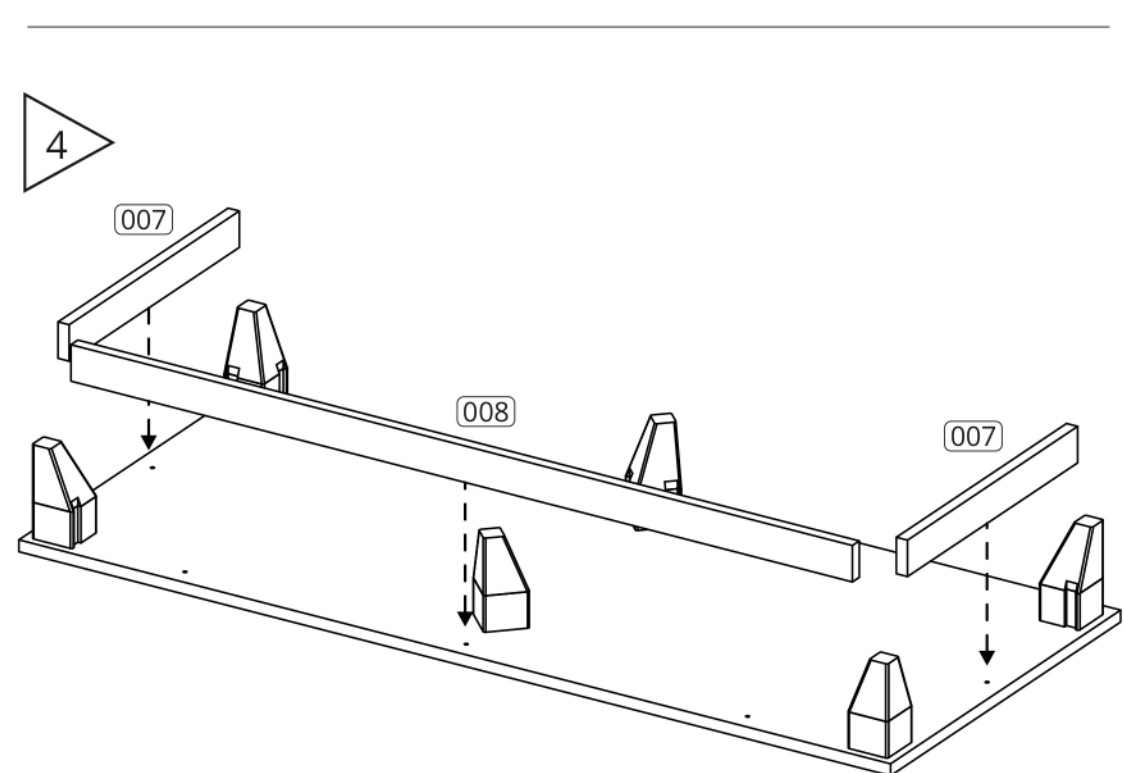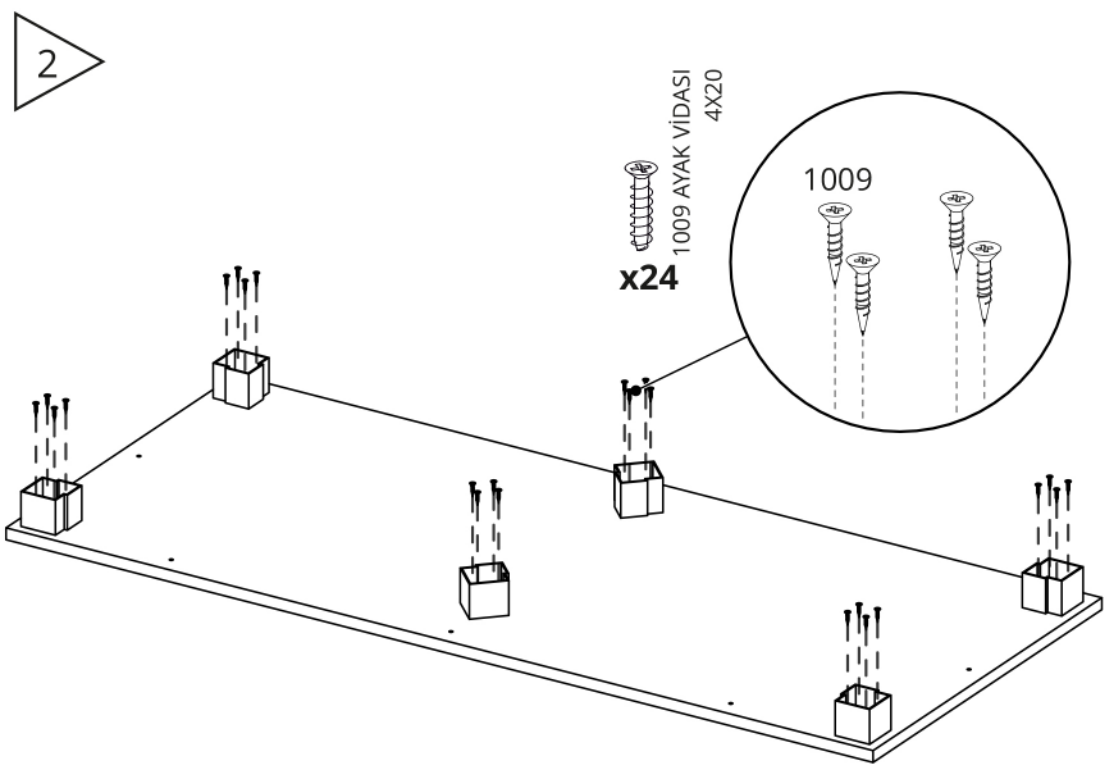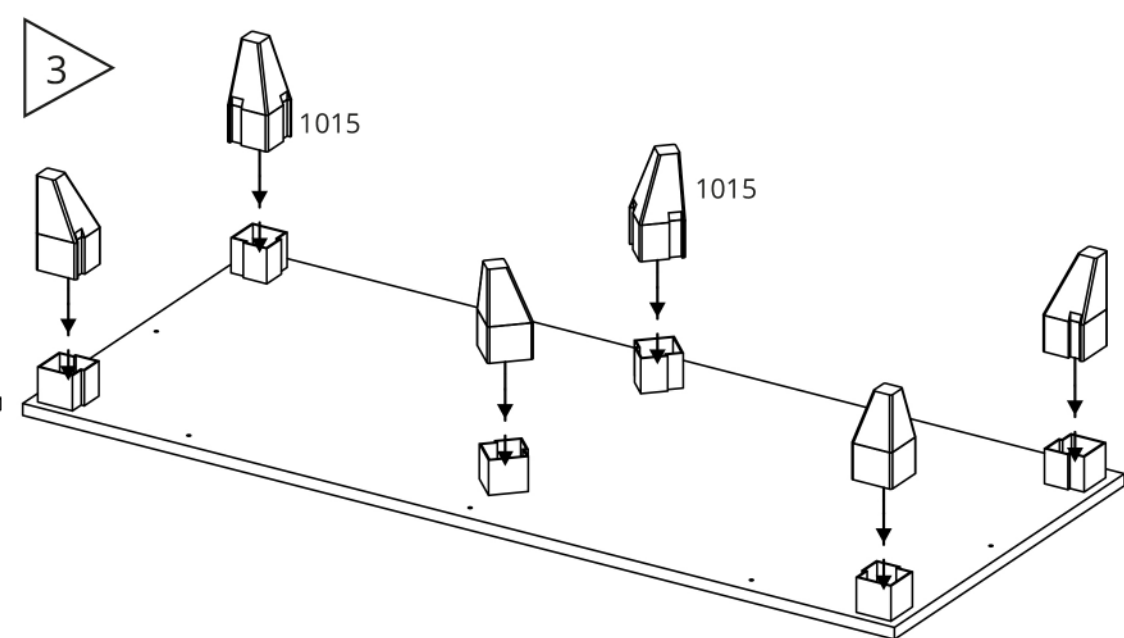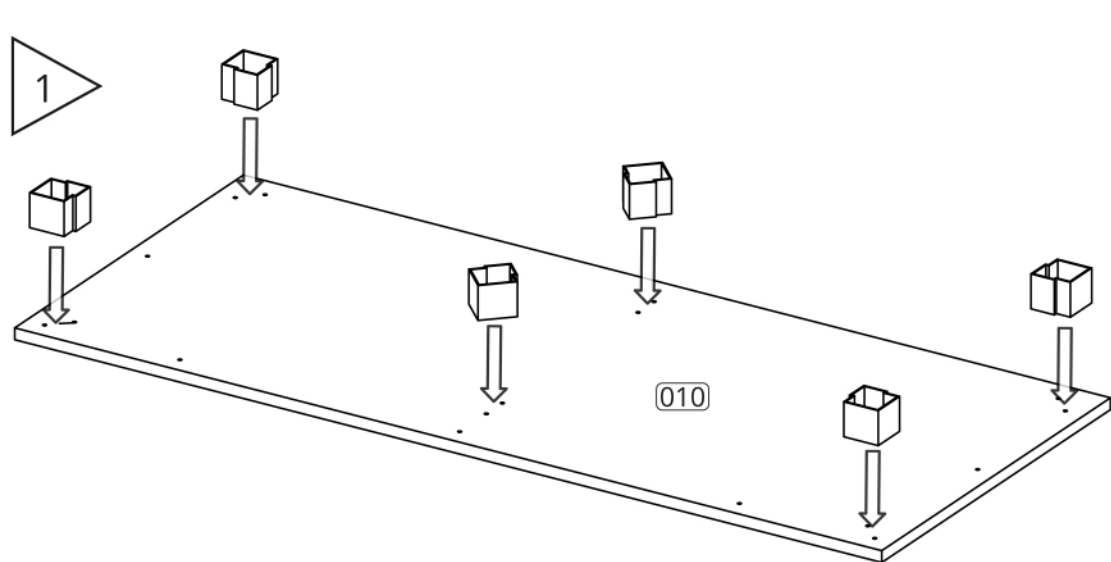


5

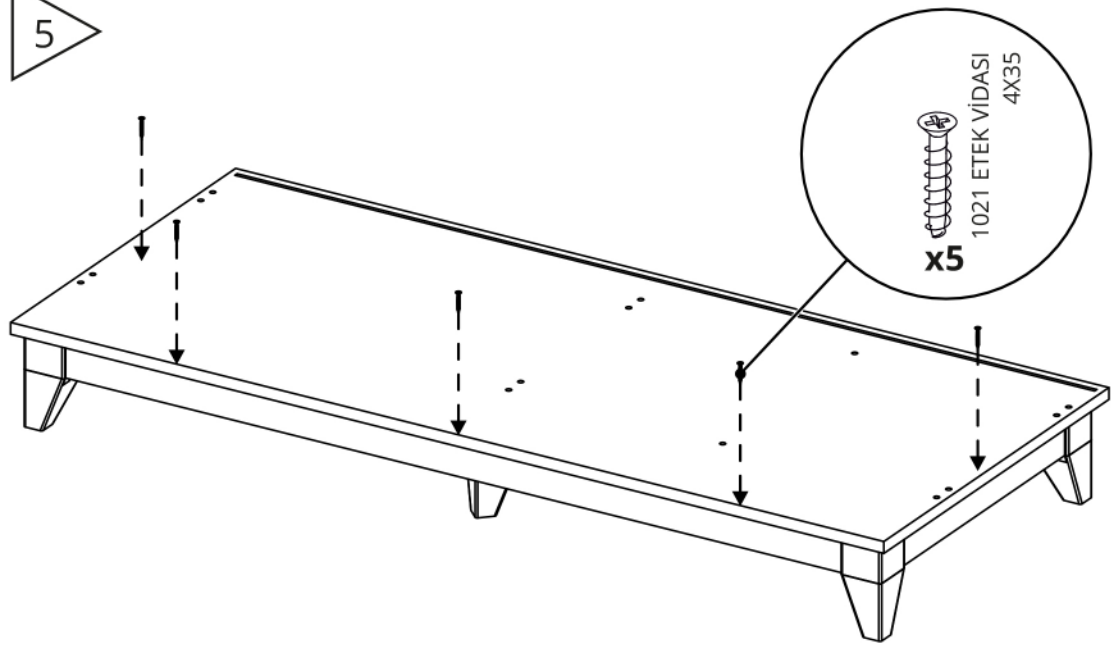


7

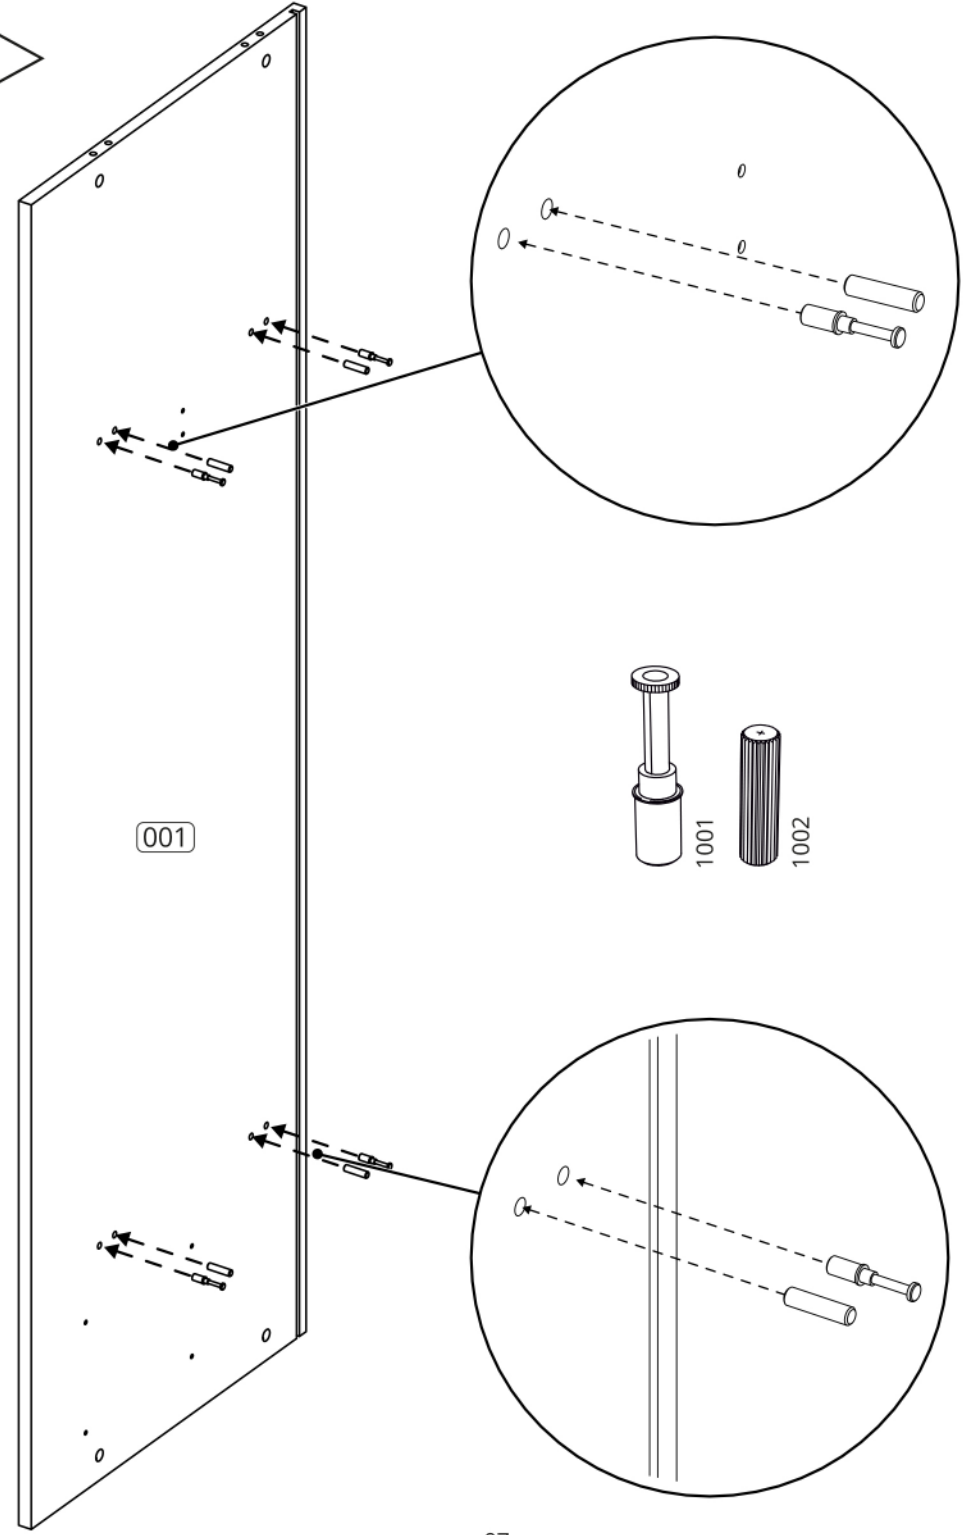


6

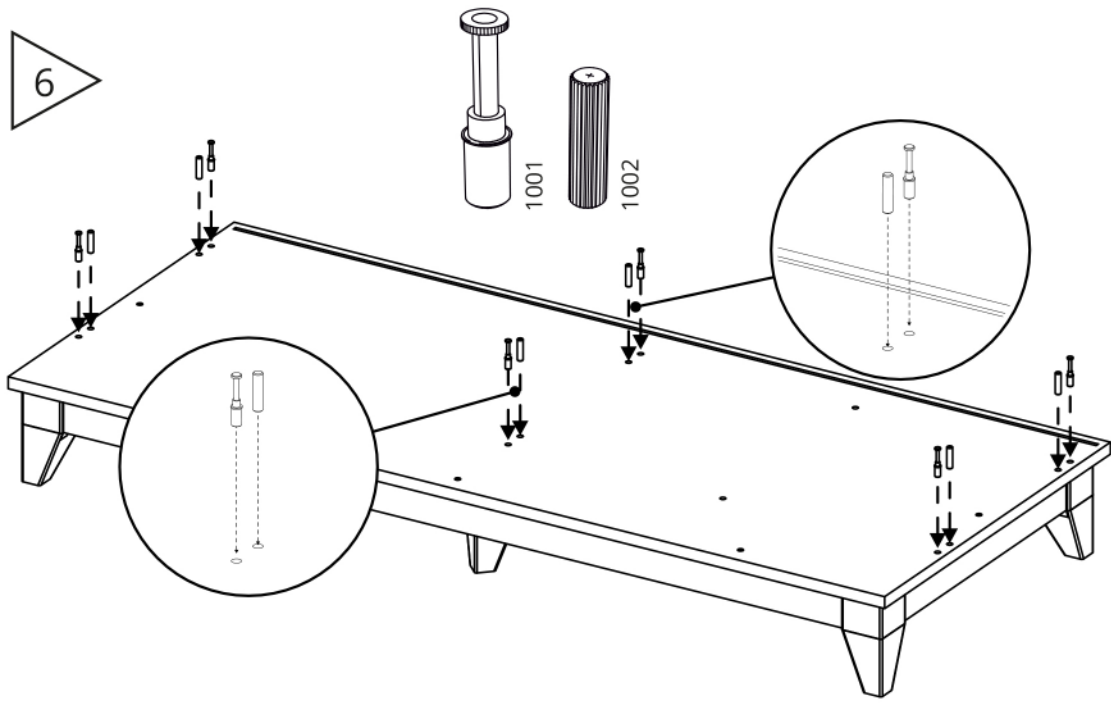


8

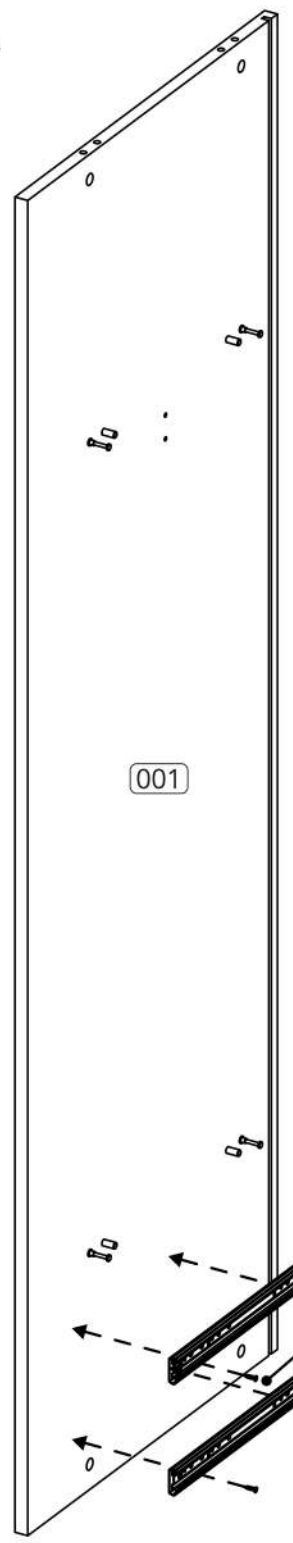


1. **x4** 1016
2. 1016-a 1016-b

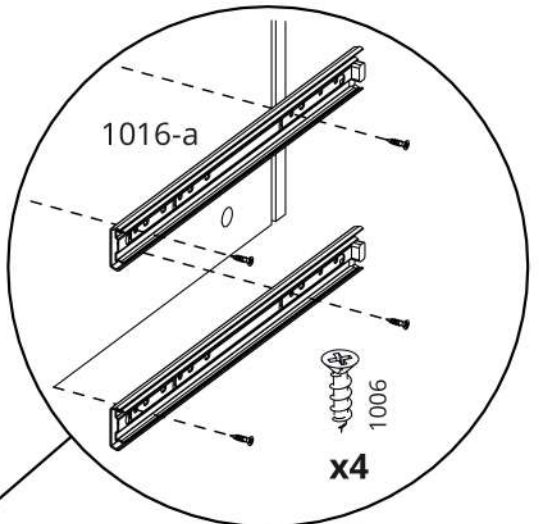


9

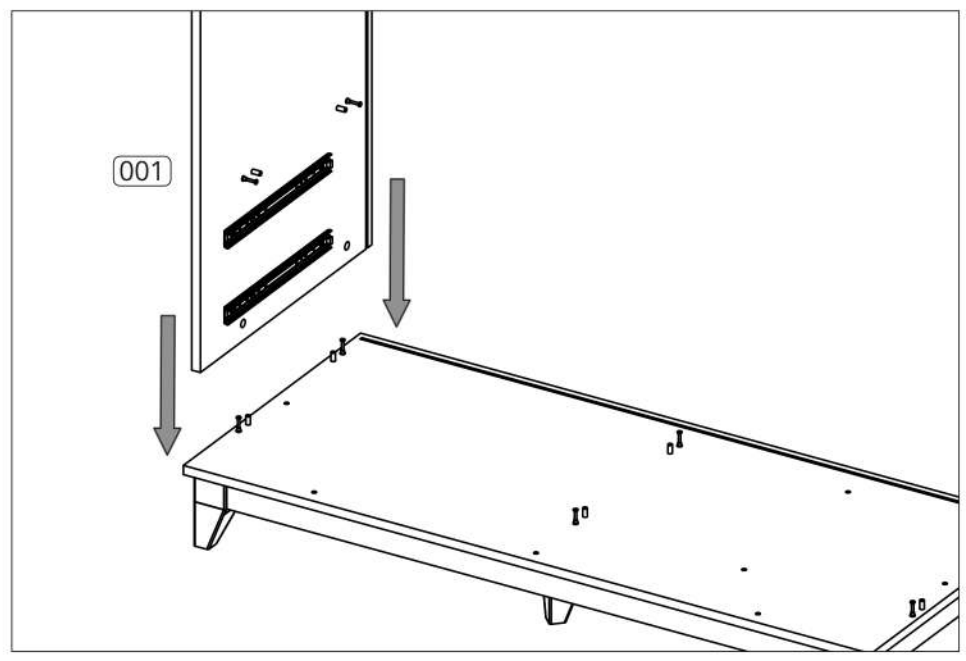

10

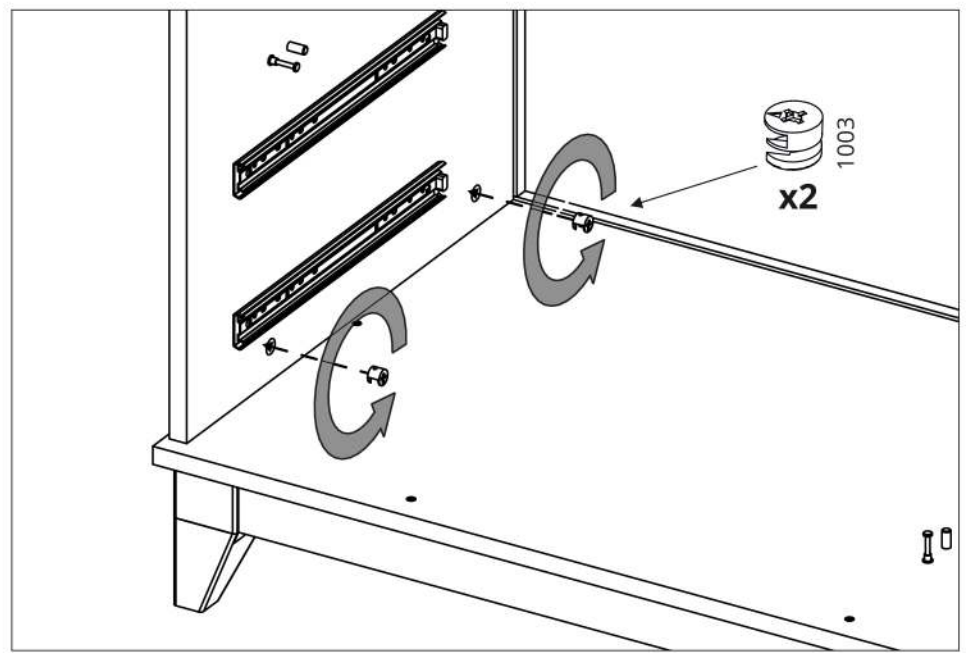


11

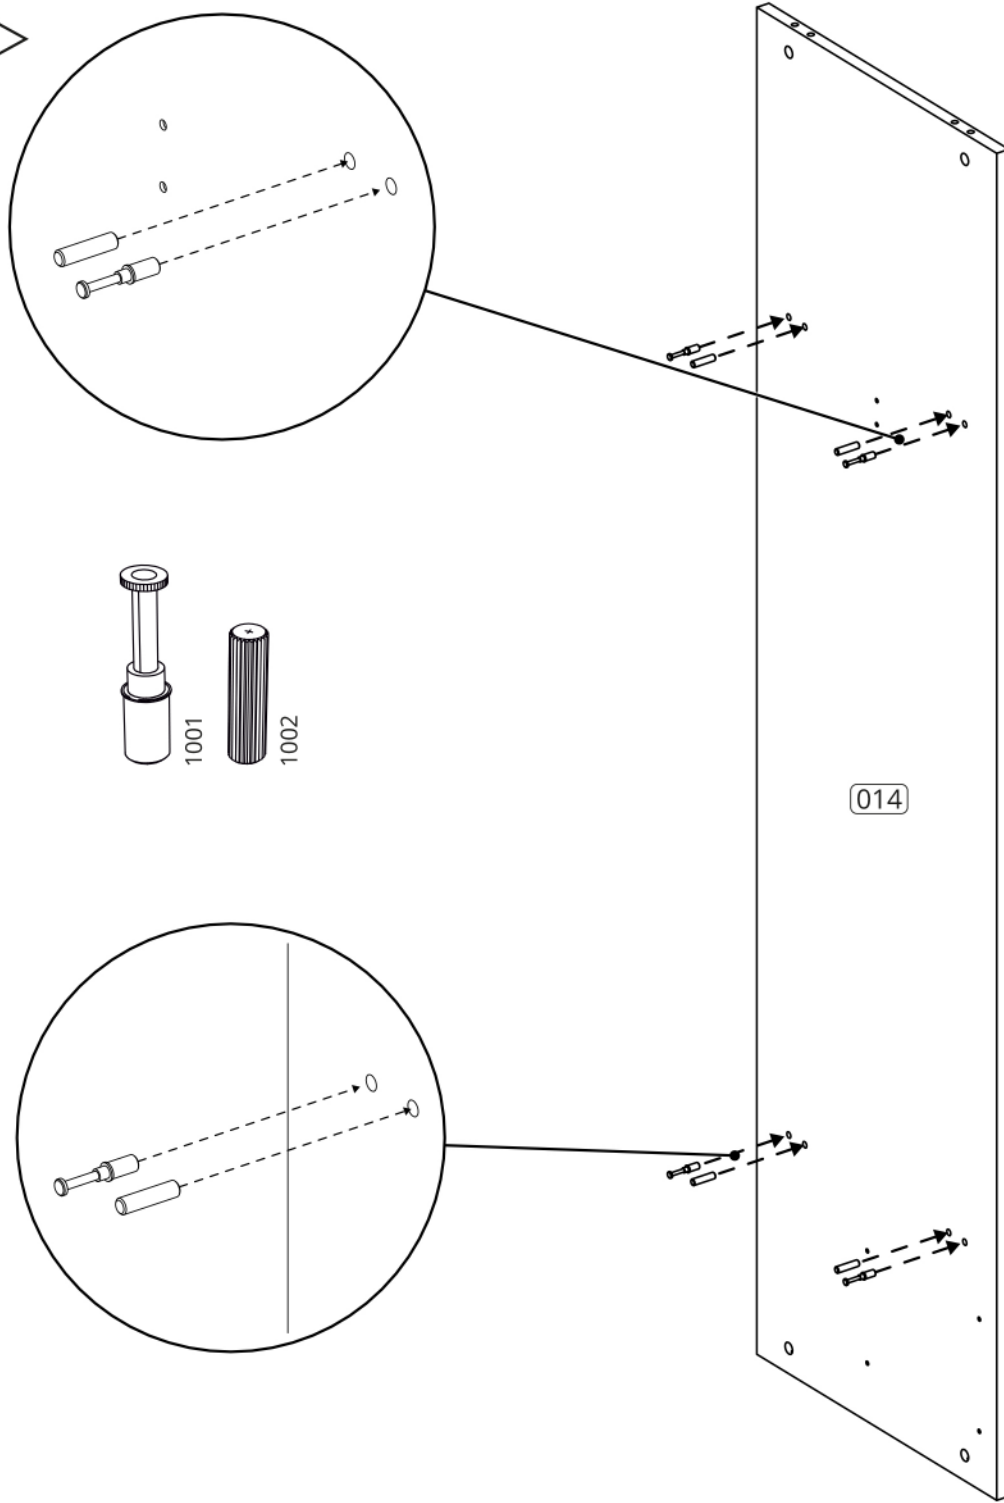


10

12

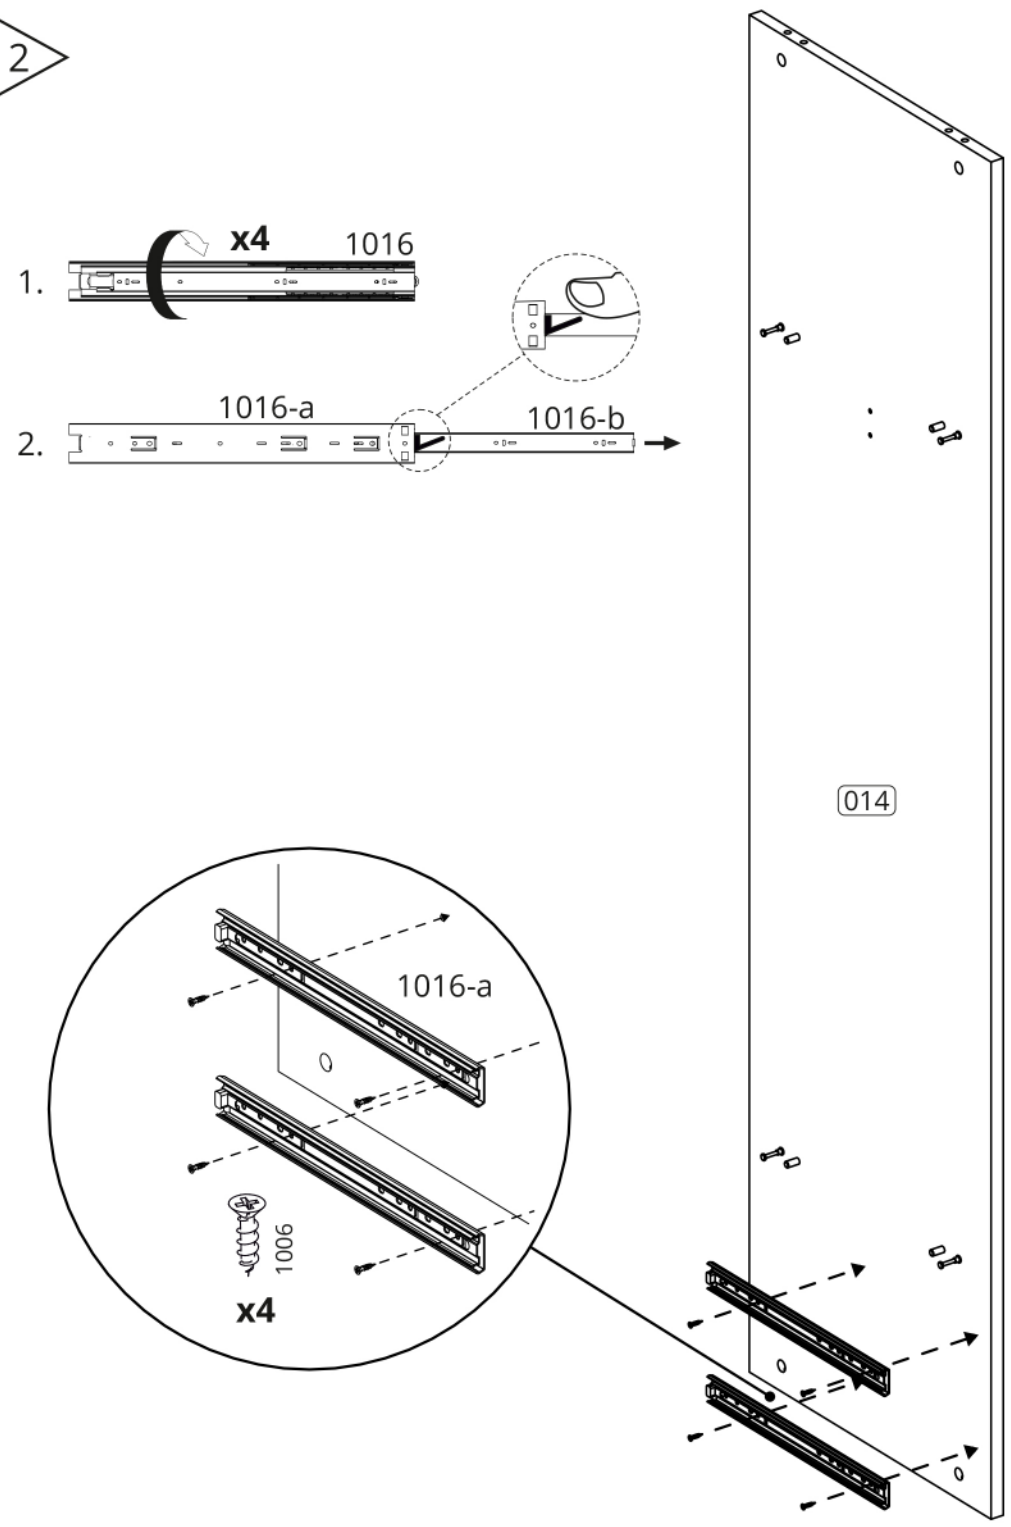


11


13

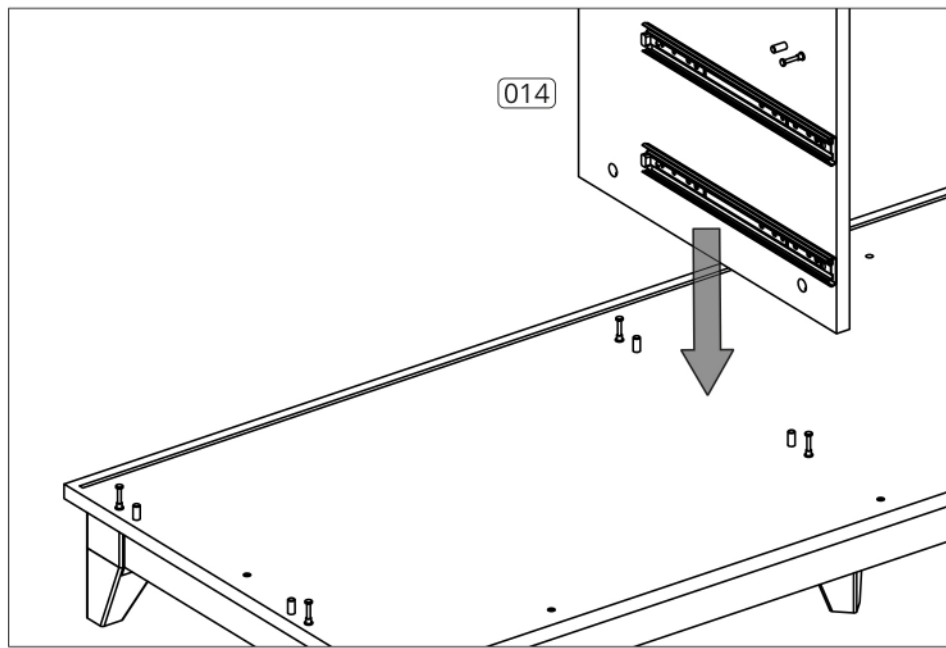


15

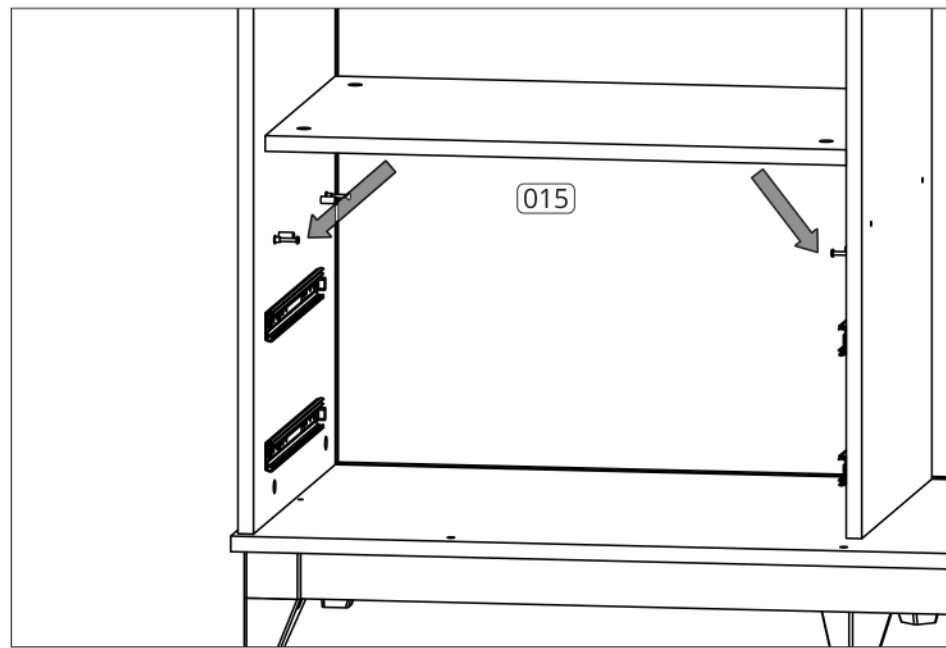

14

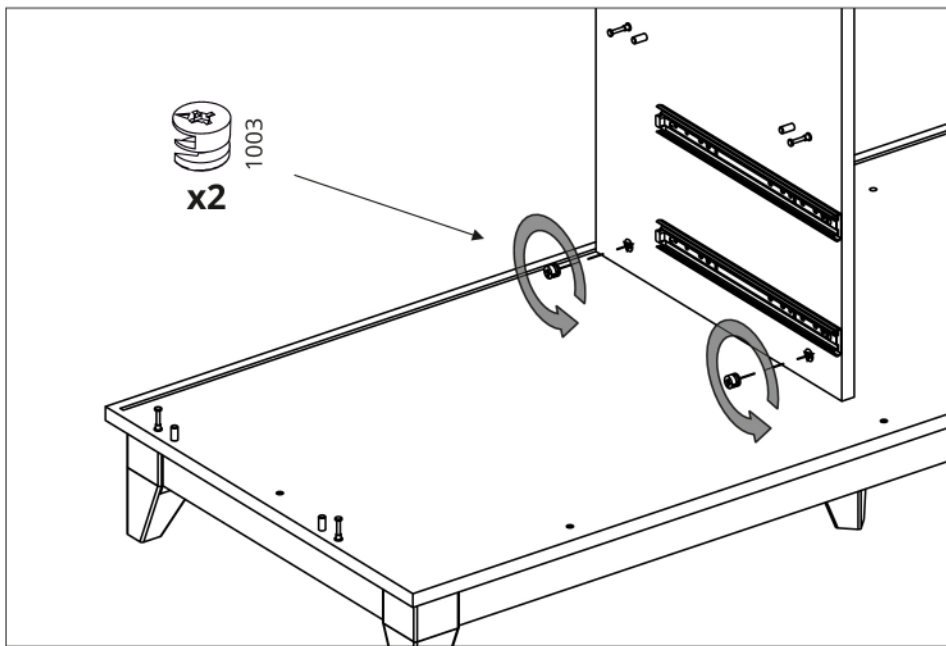


16

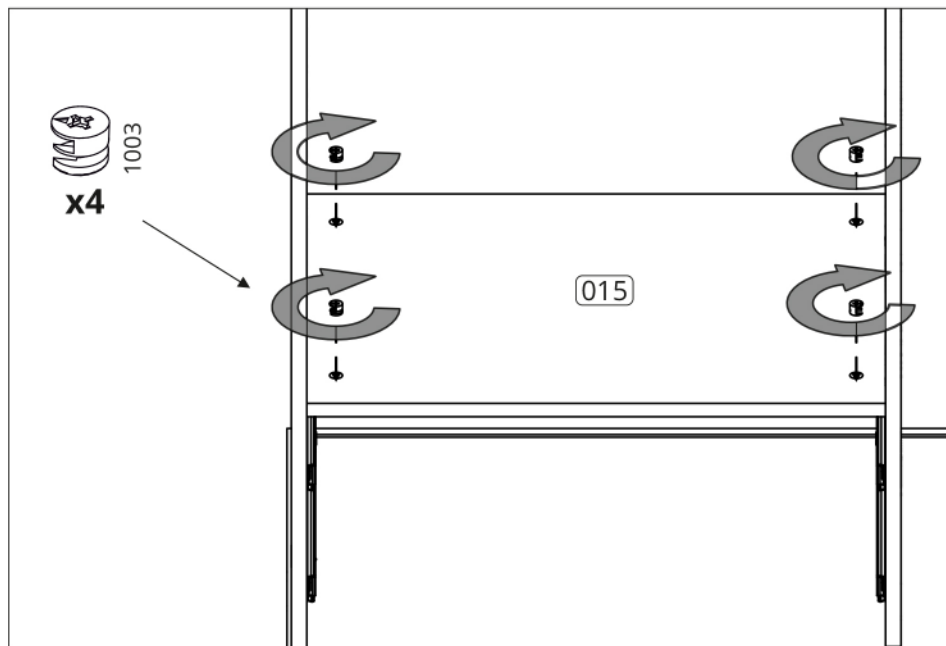





17

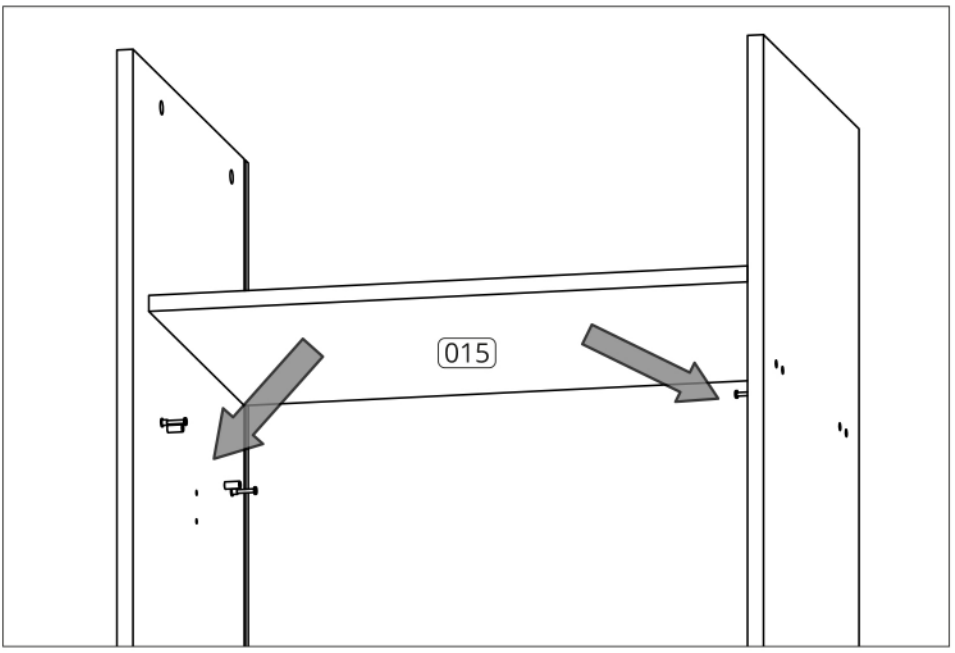


19

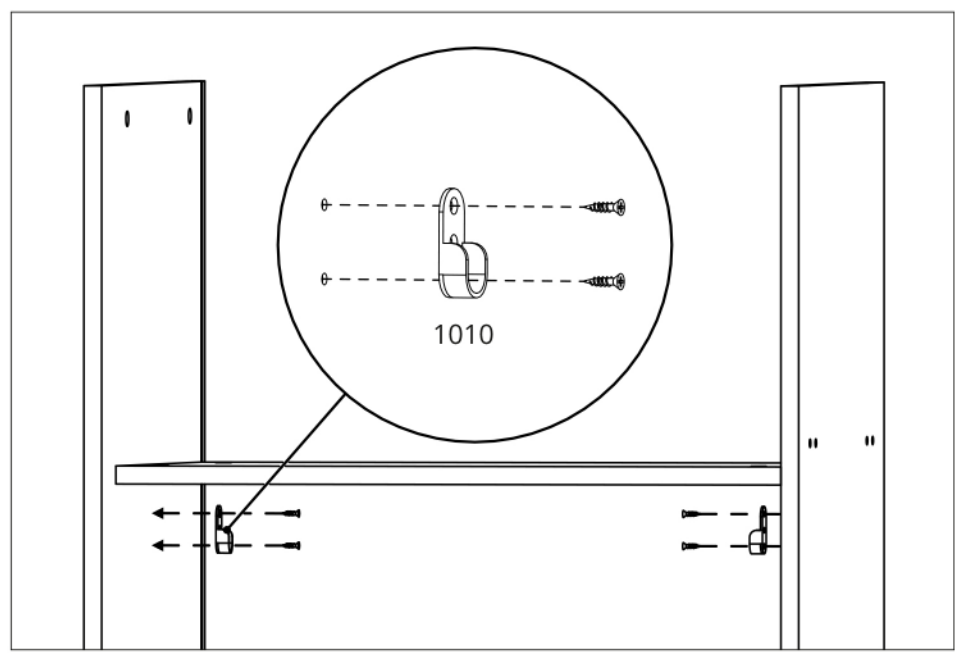

18

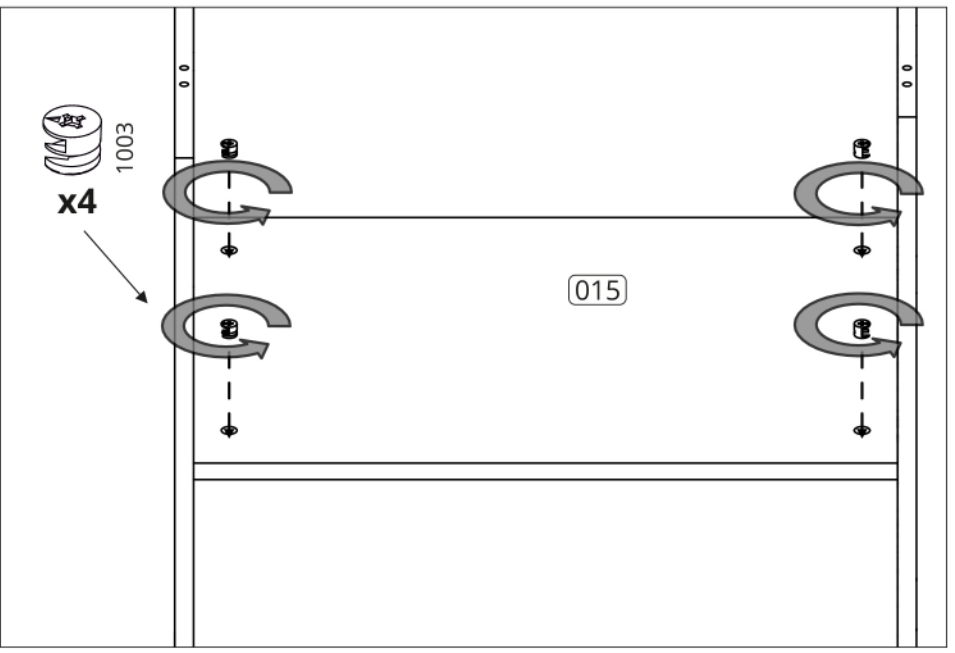


20

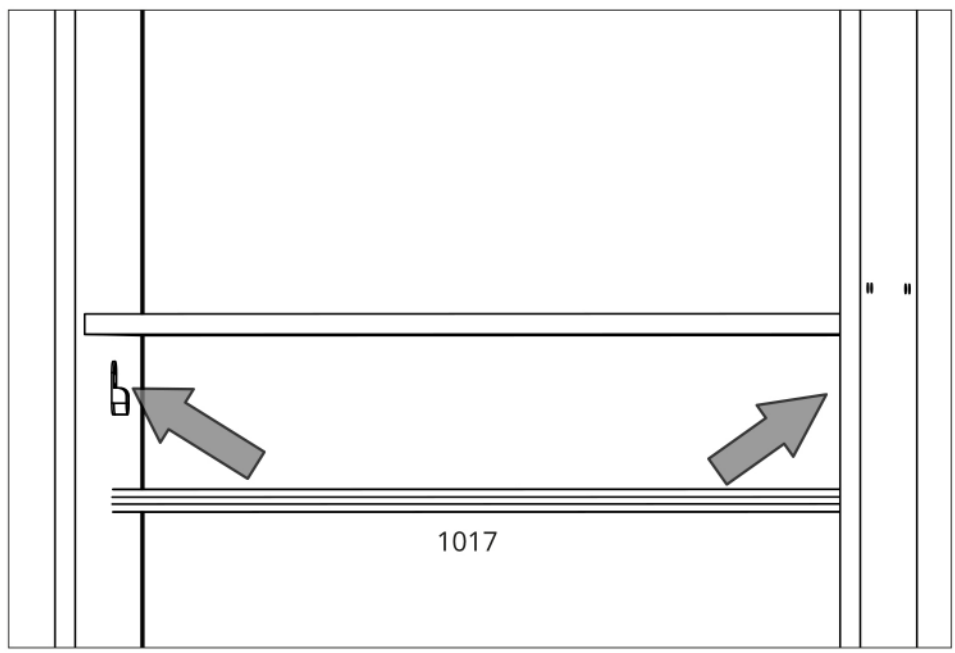




21

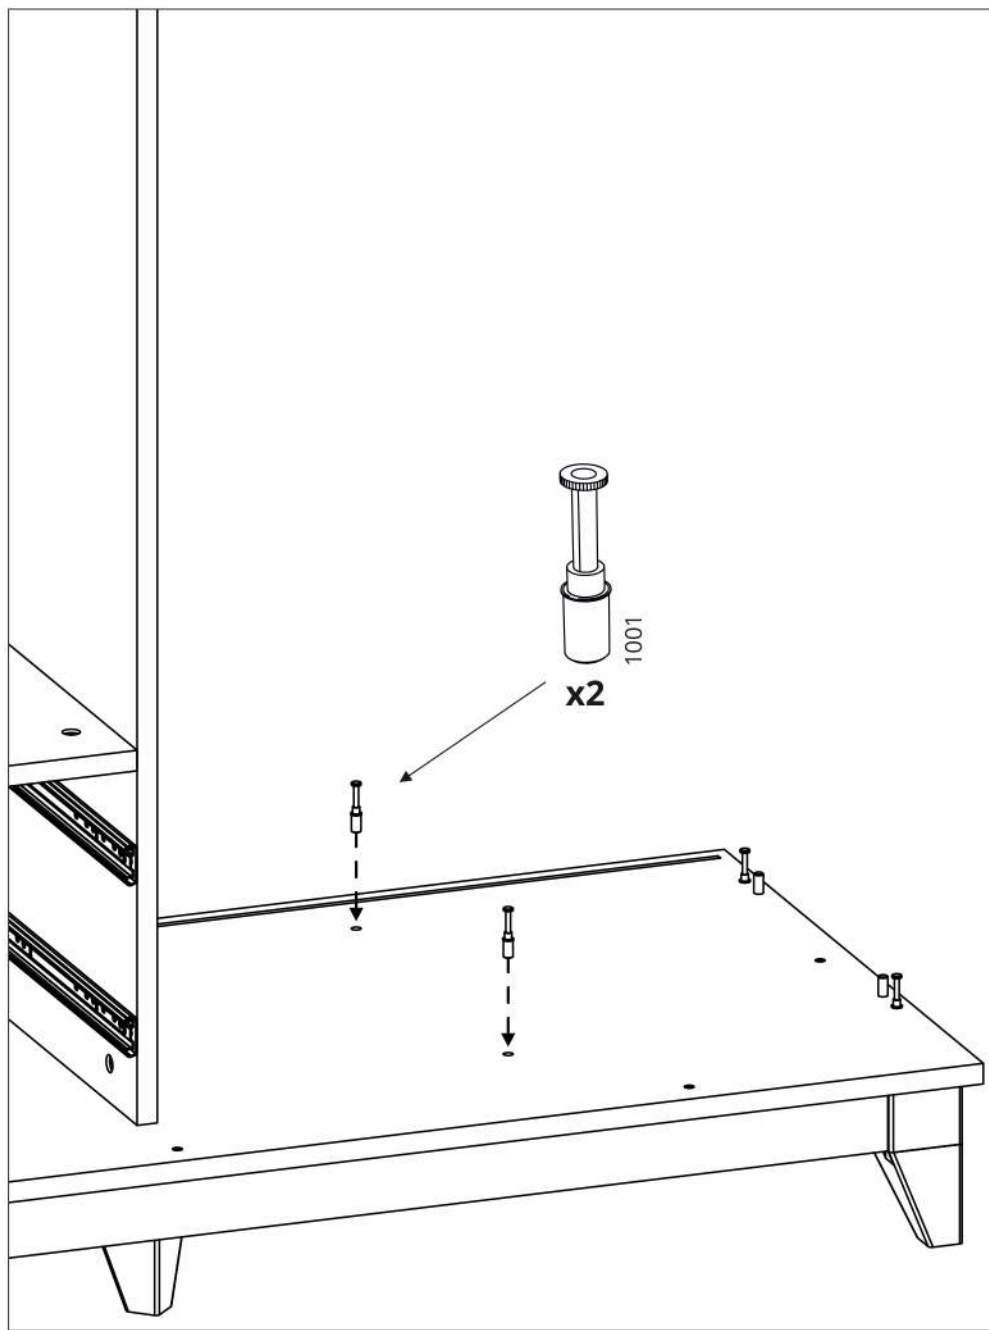


16

22

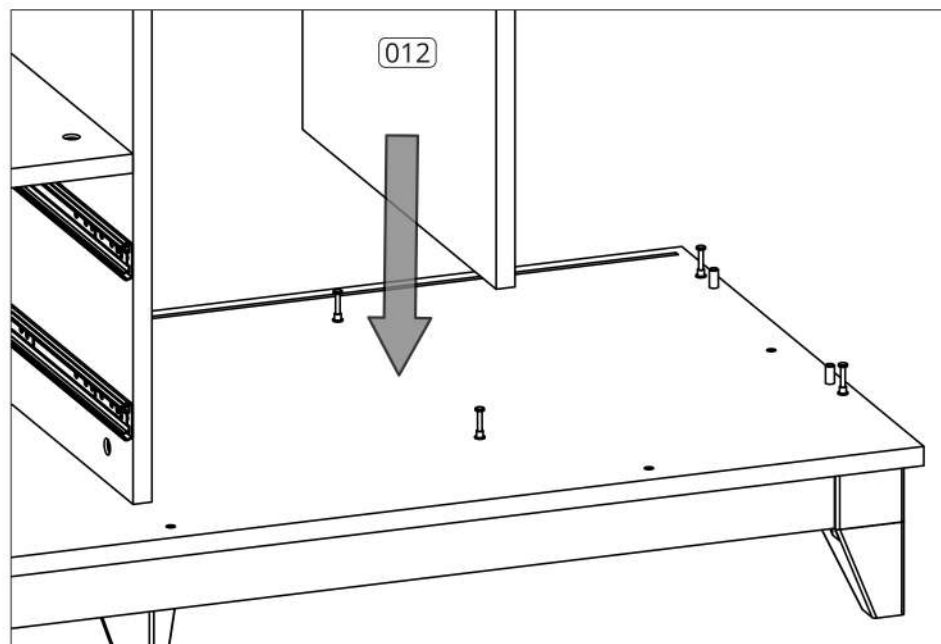


23

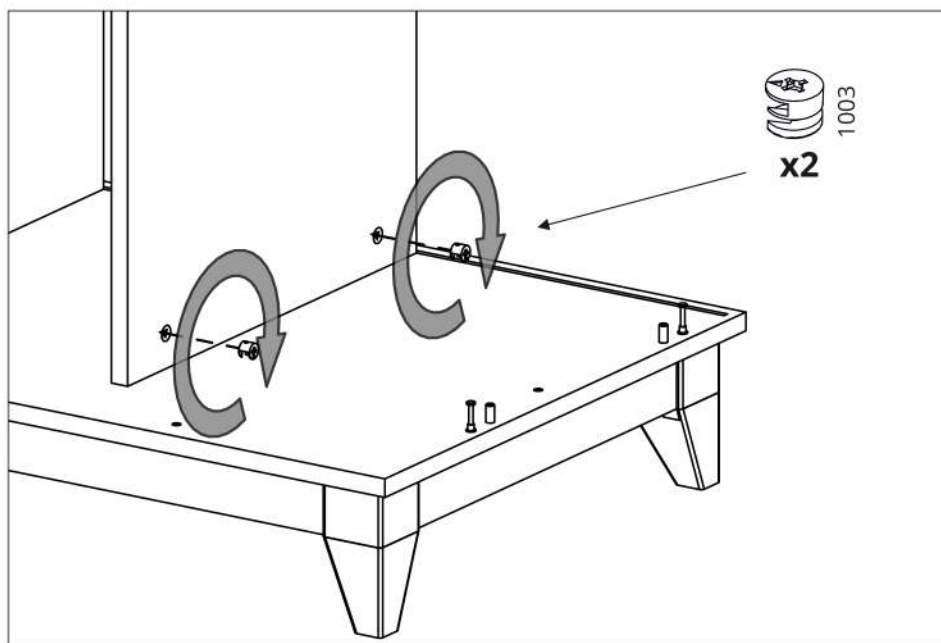


17


24

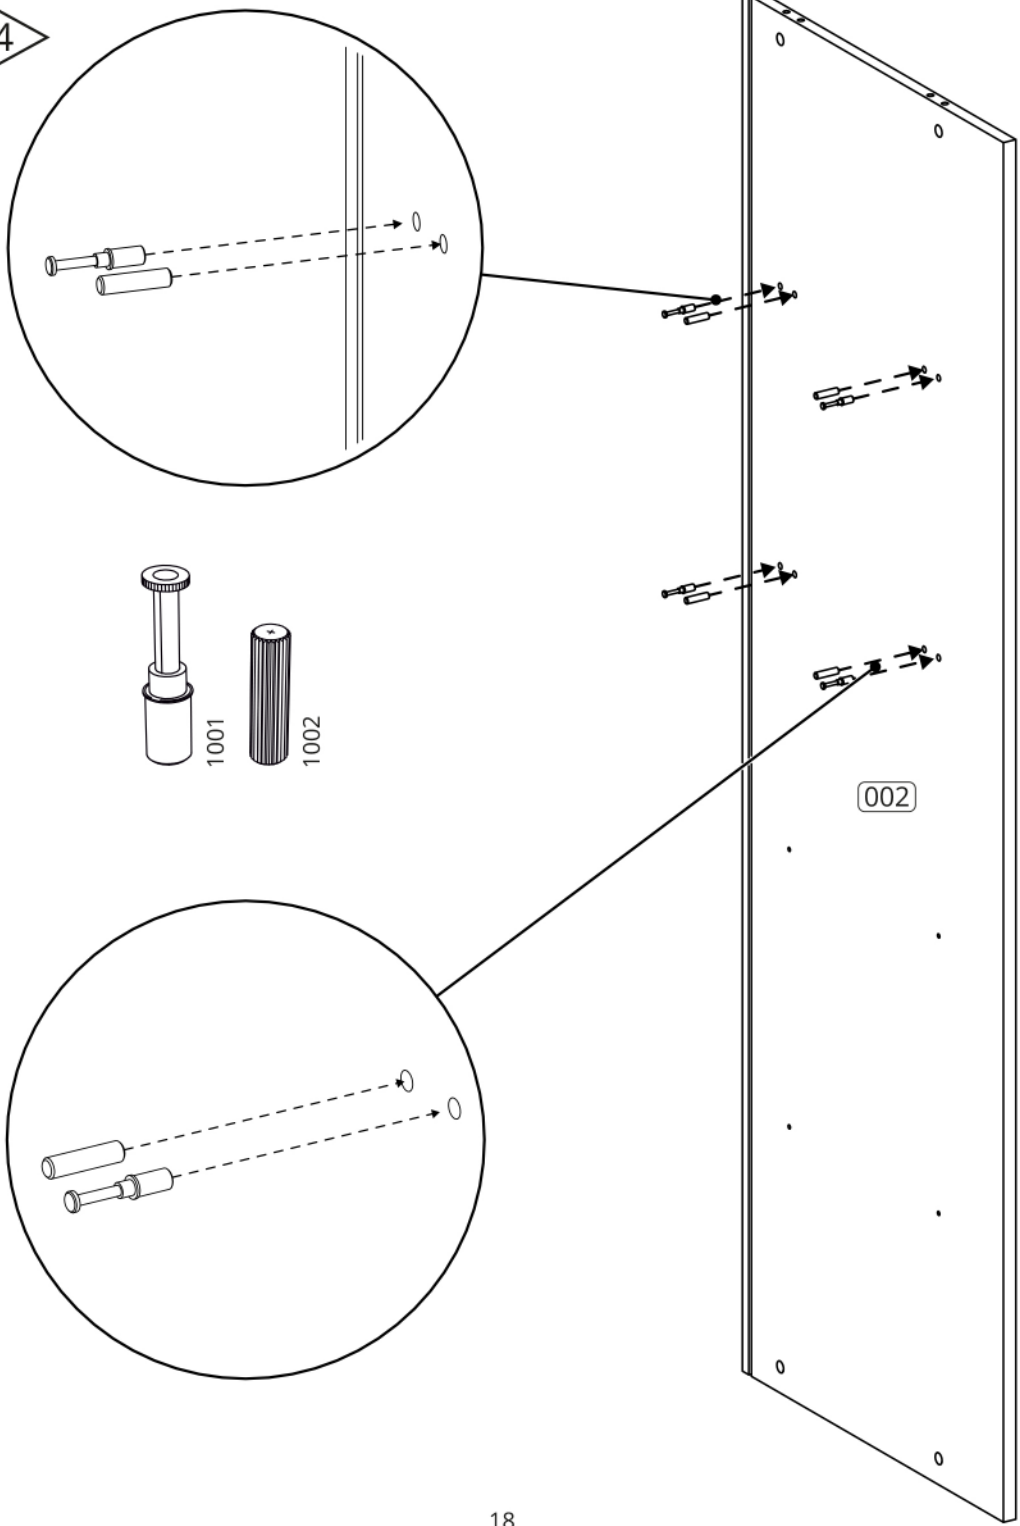


25

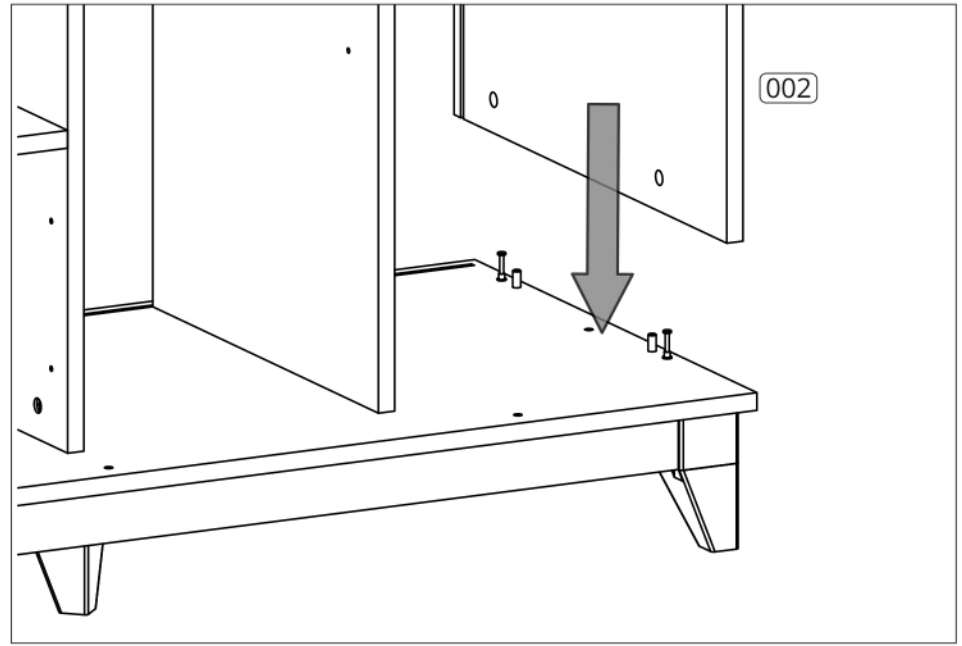

26

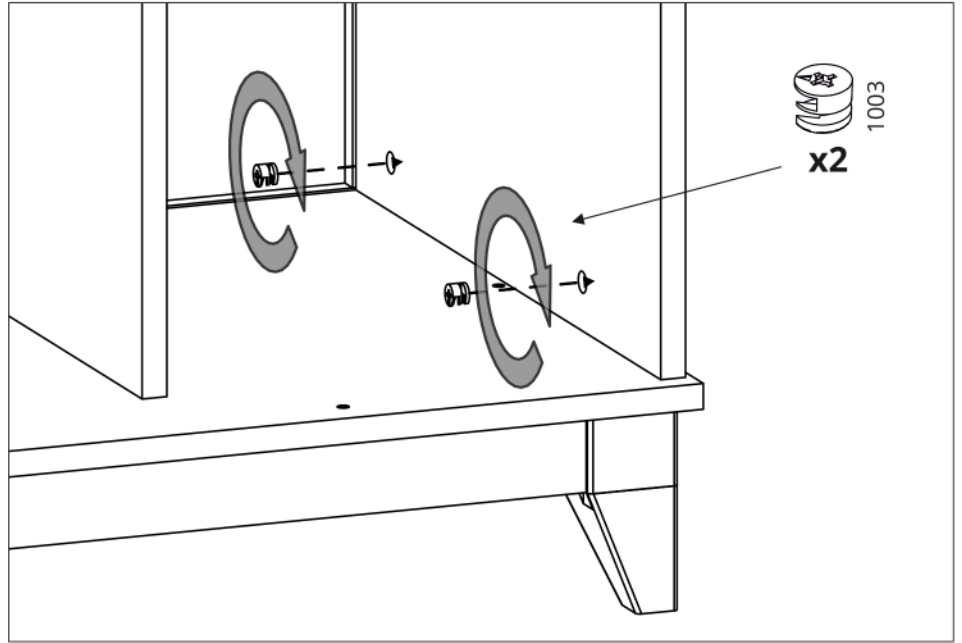


27

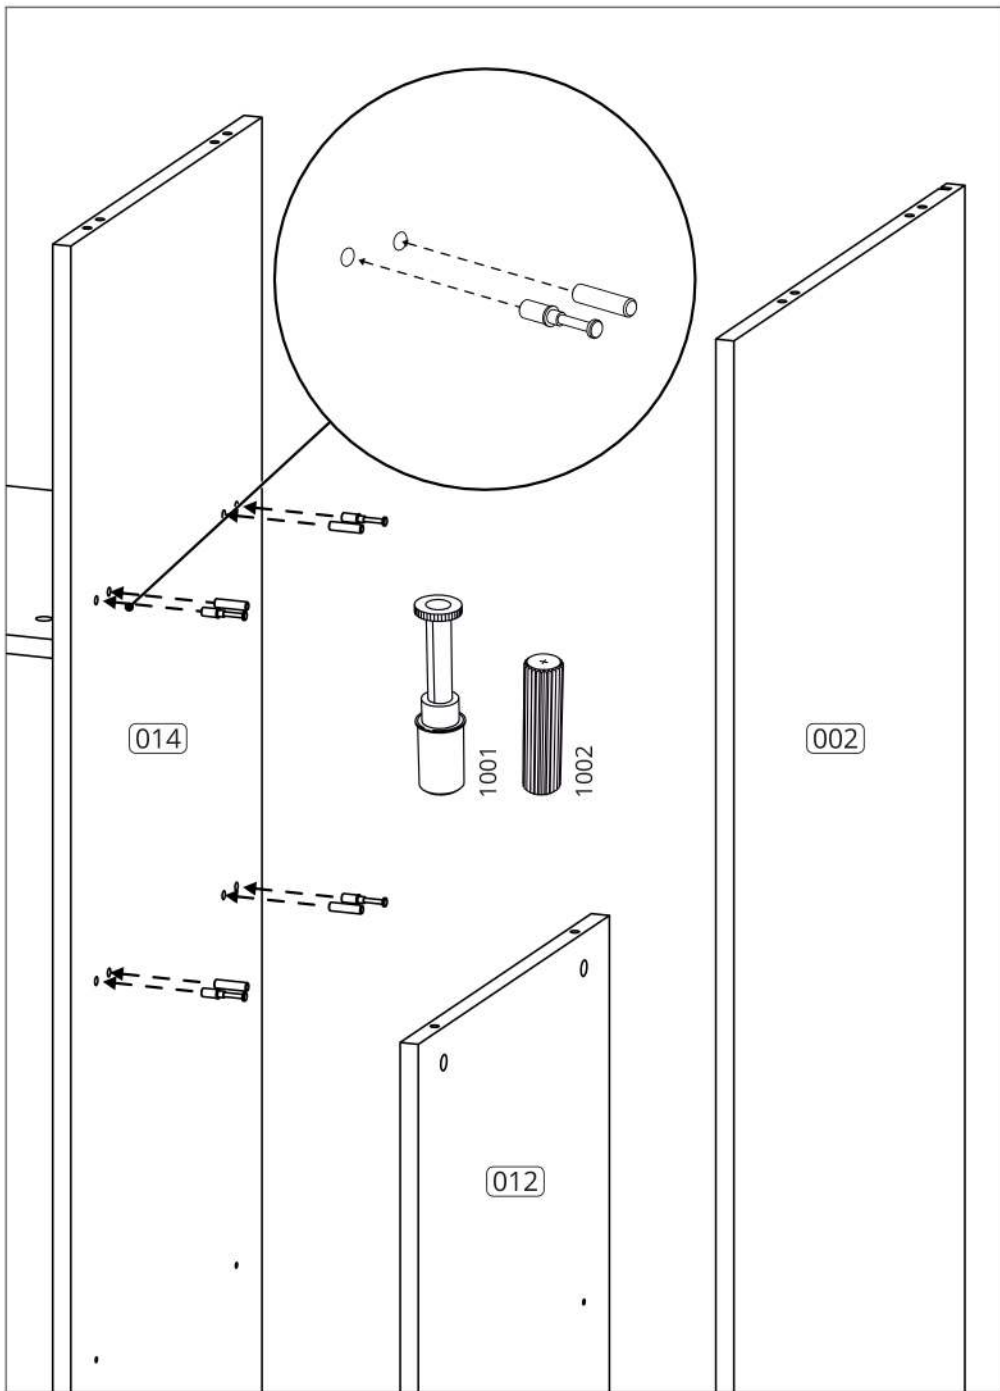


20

28

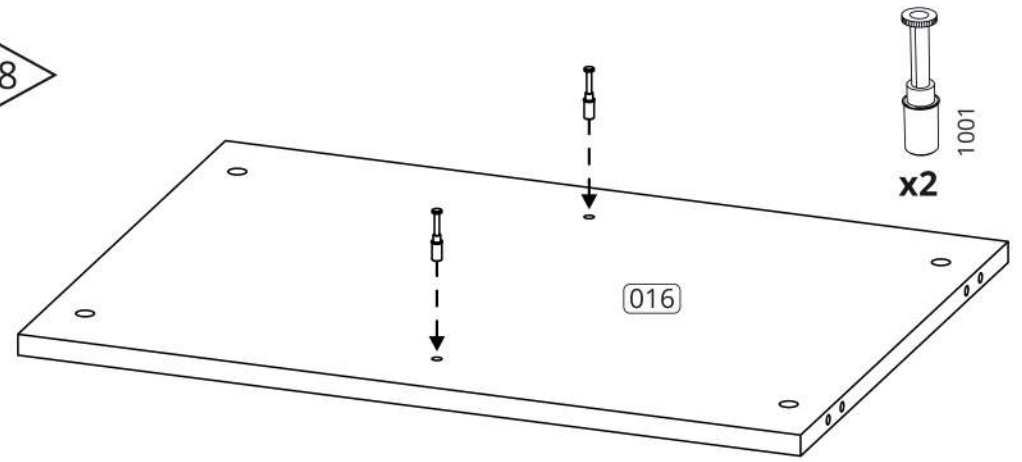


29

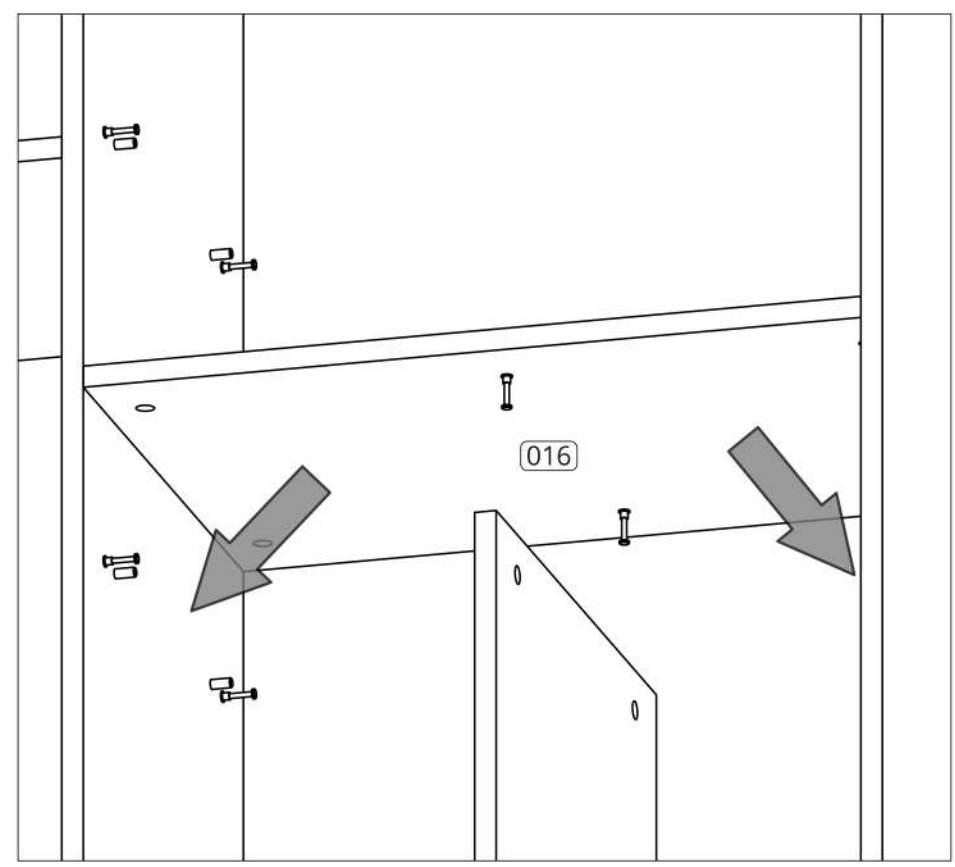


21


30

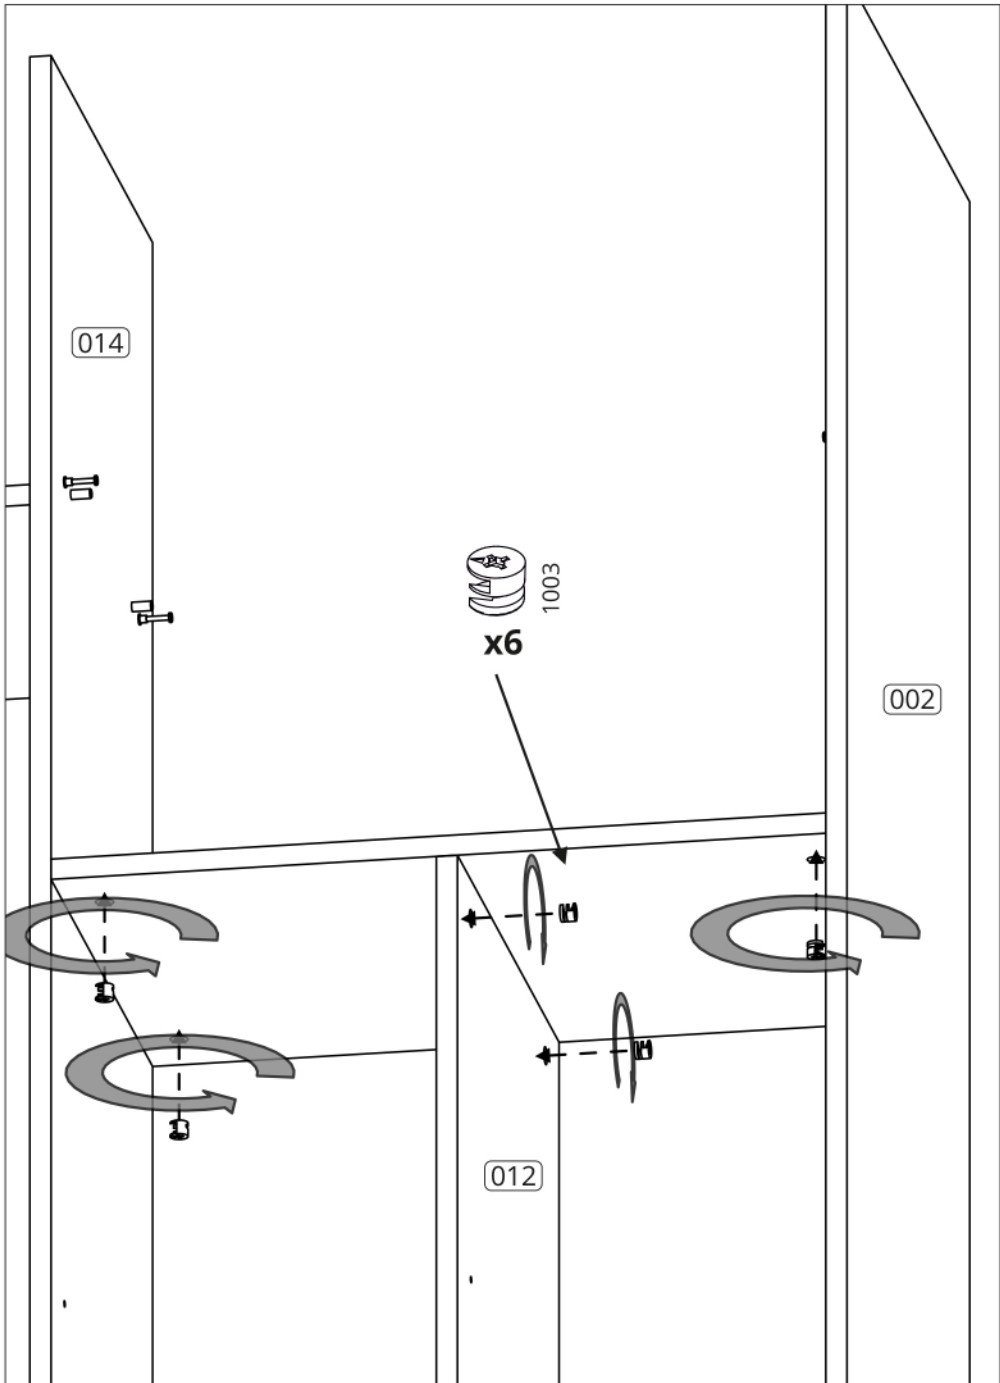


31



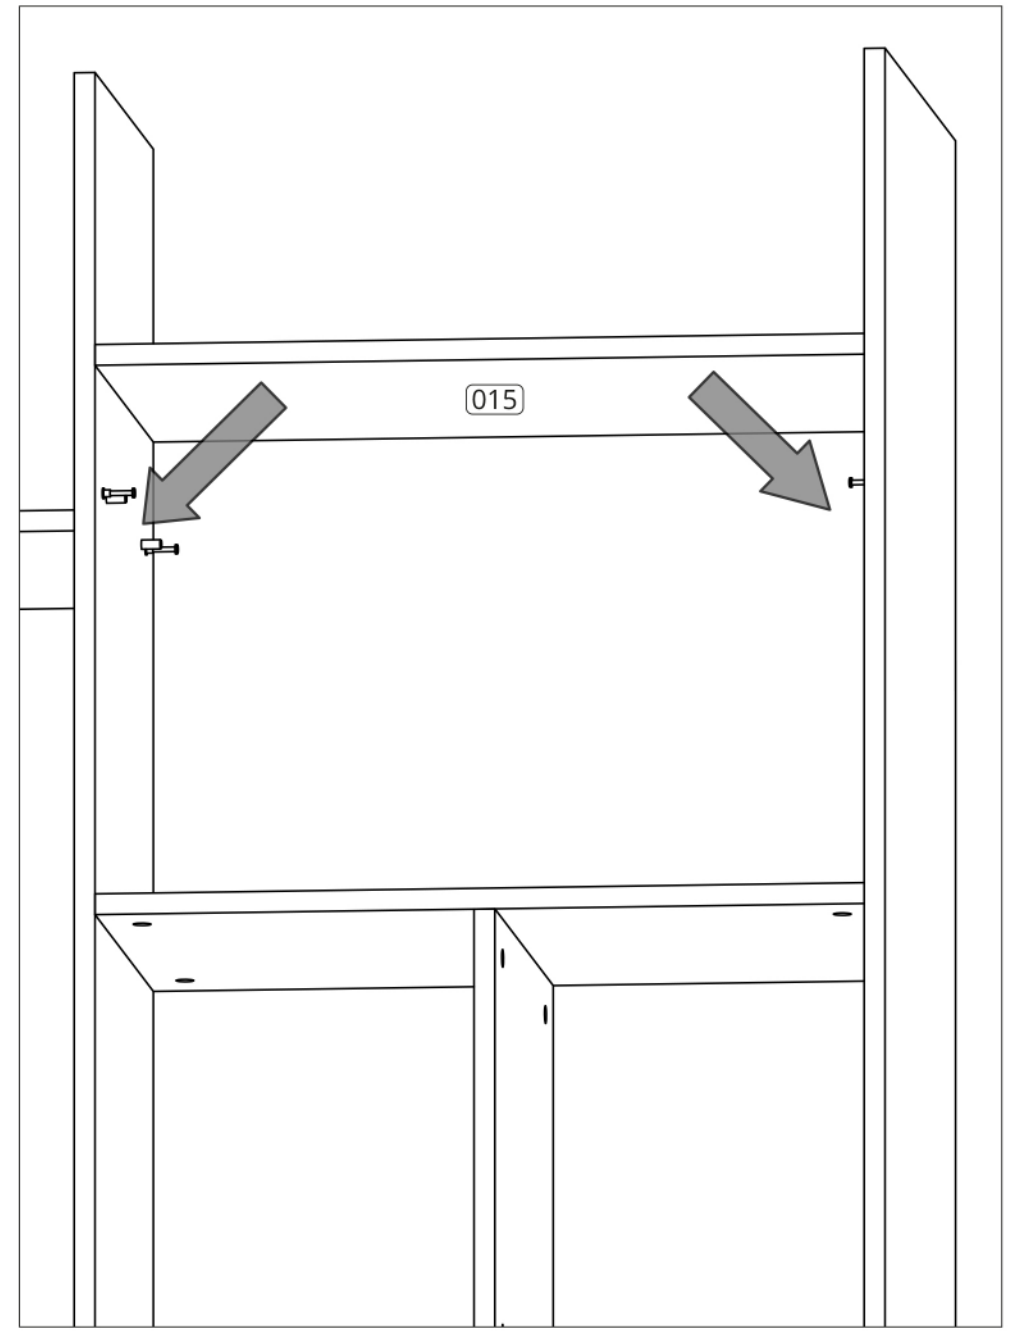


32

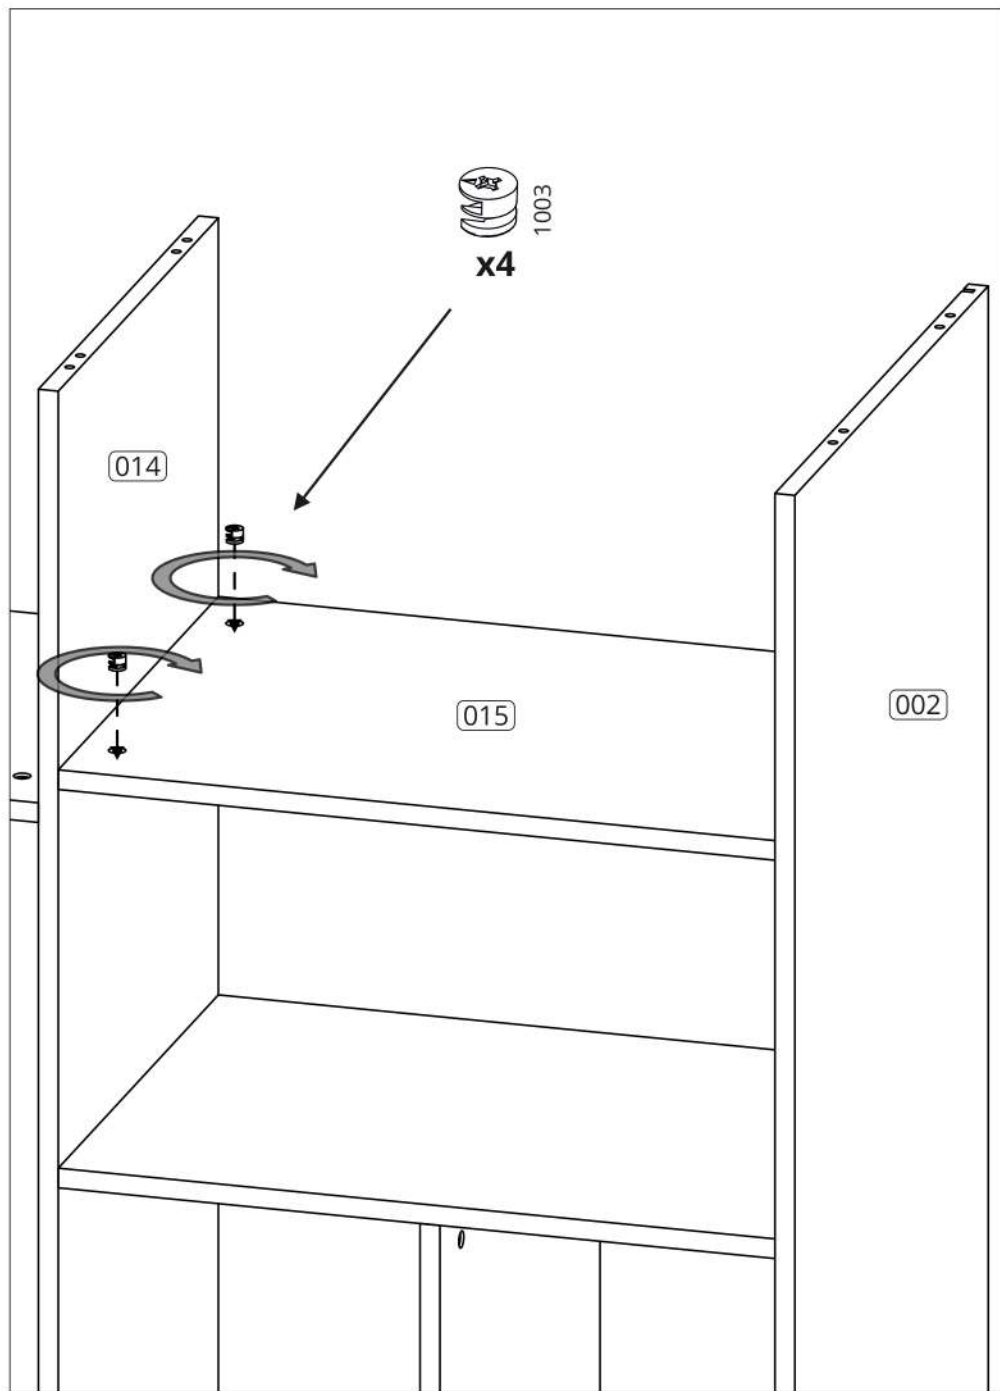


33

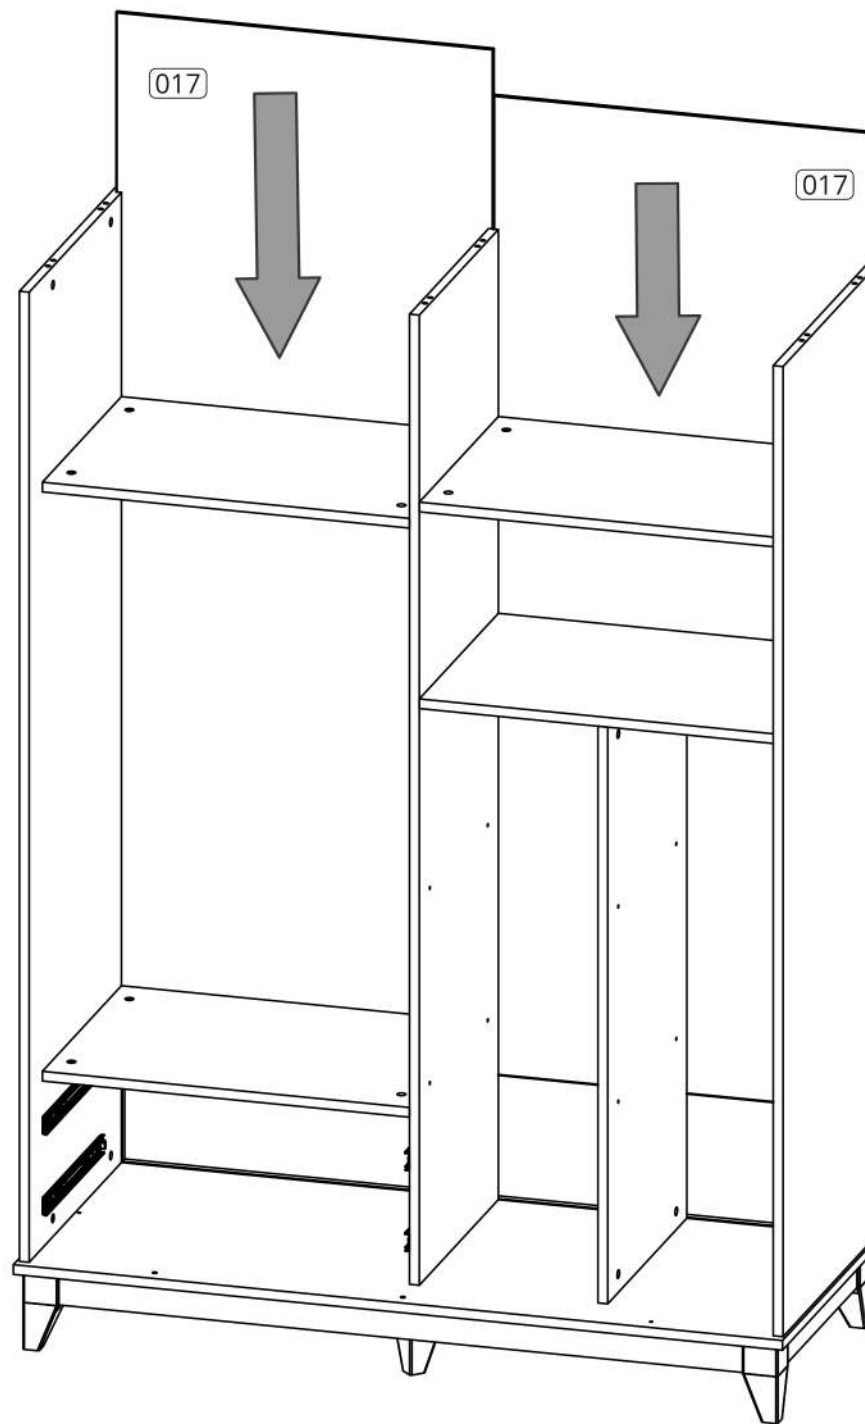


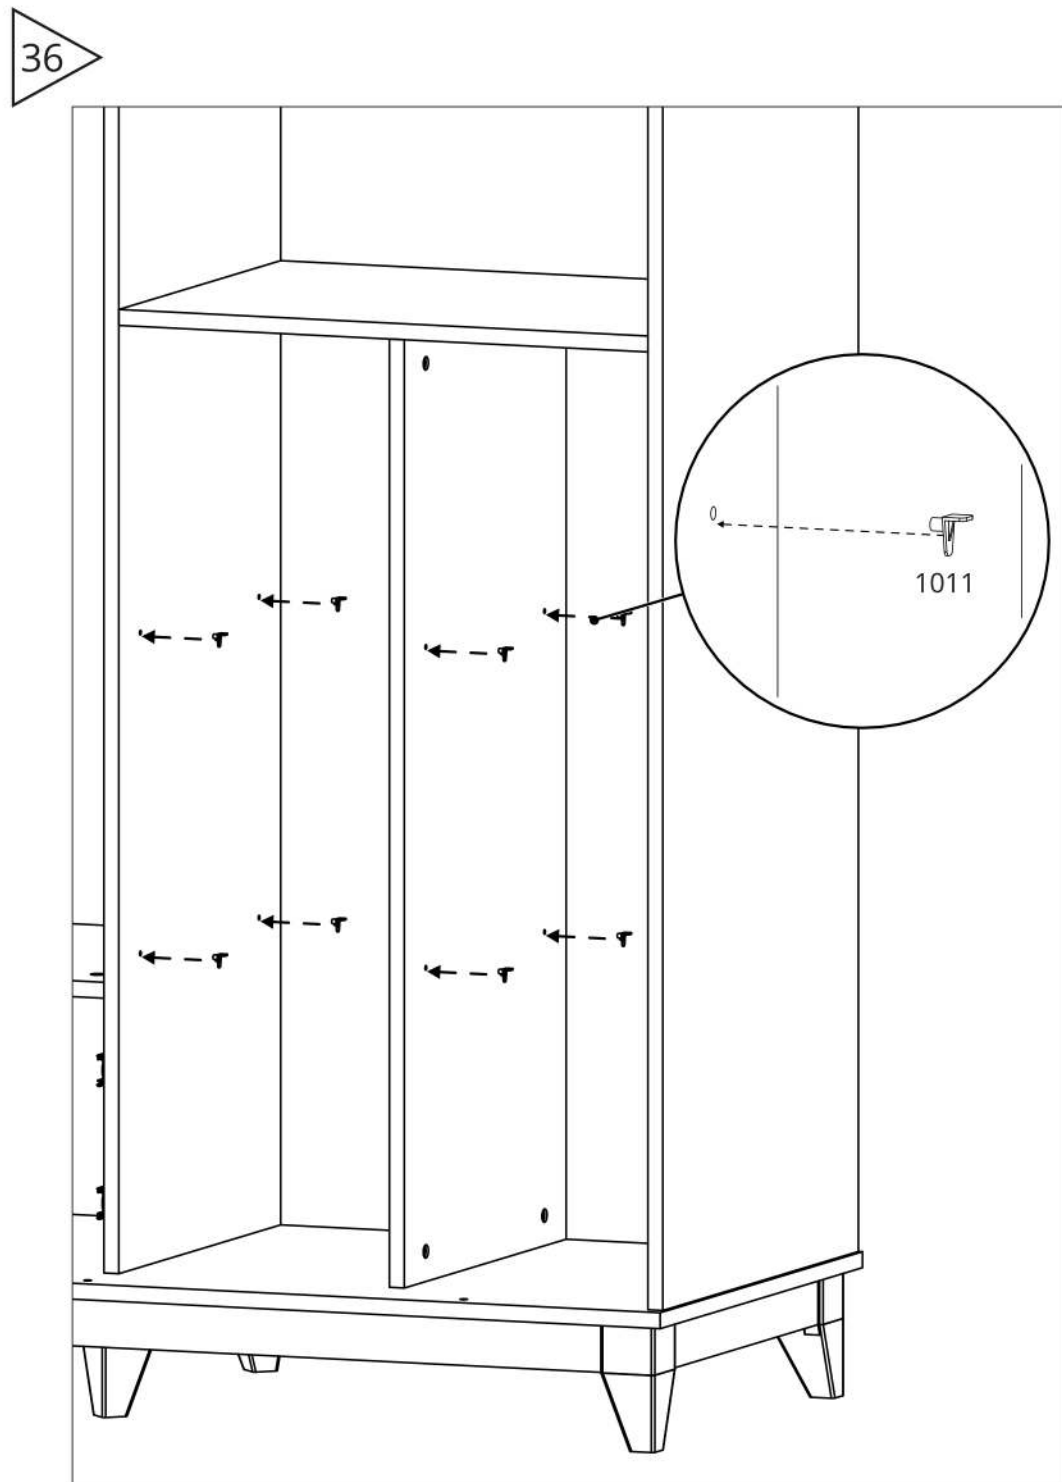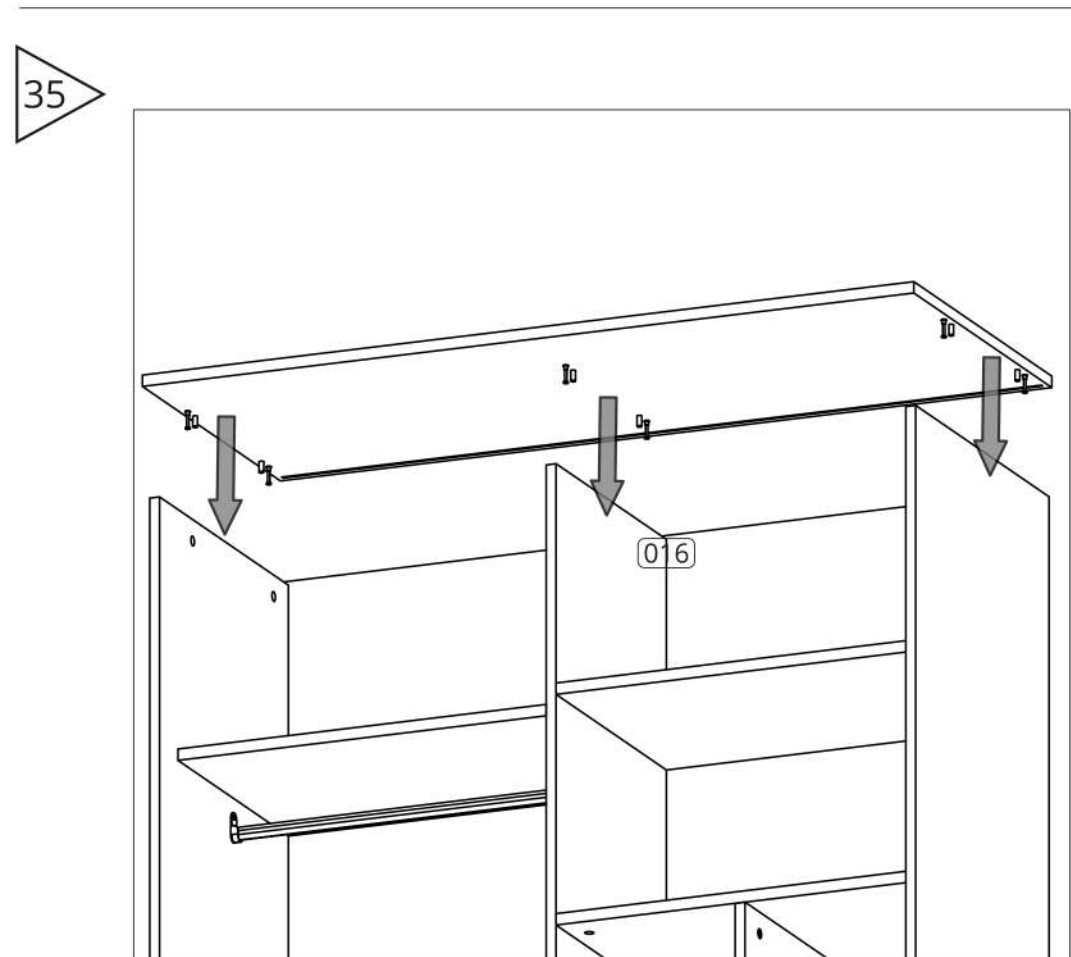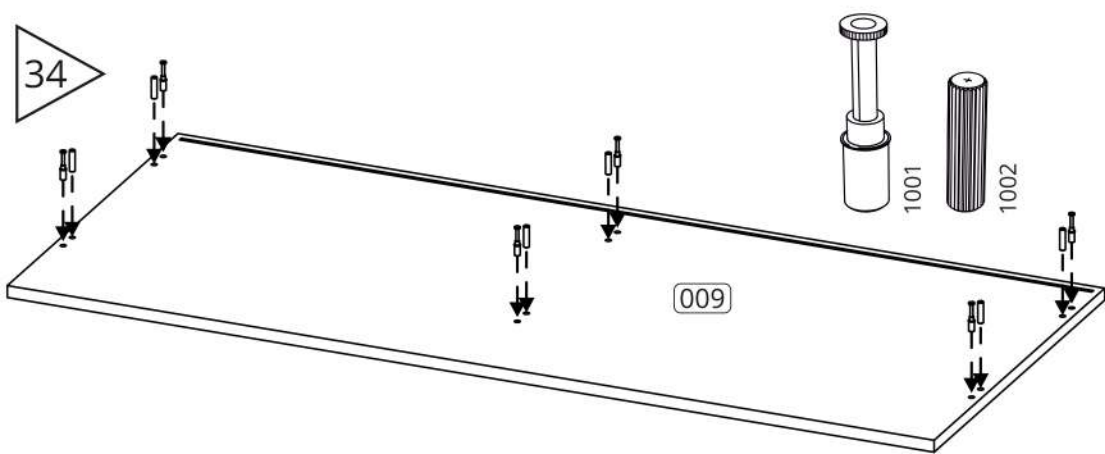


37

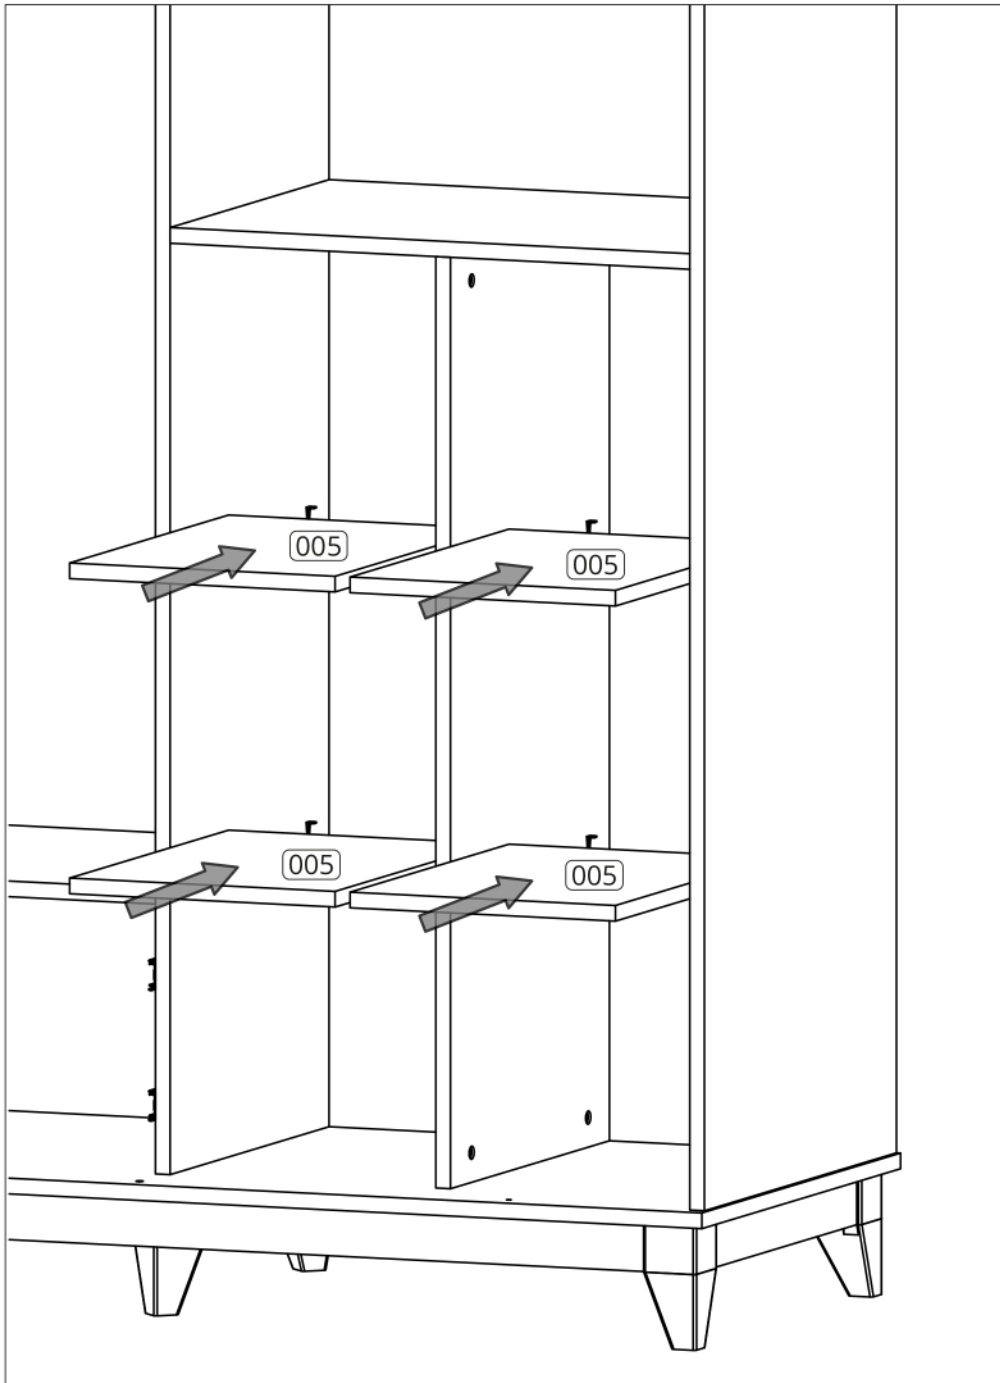

38

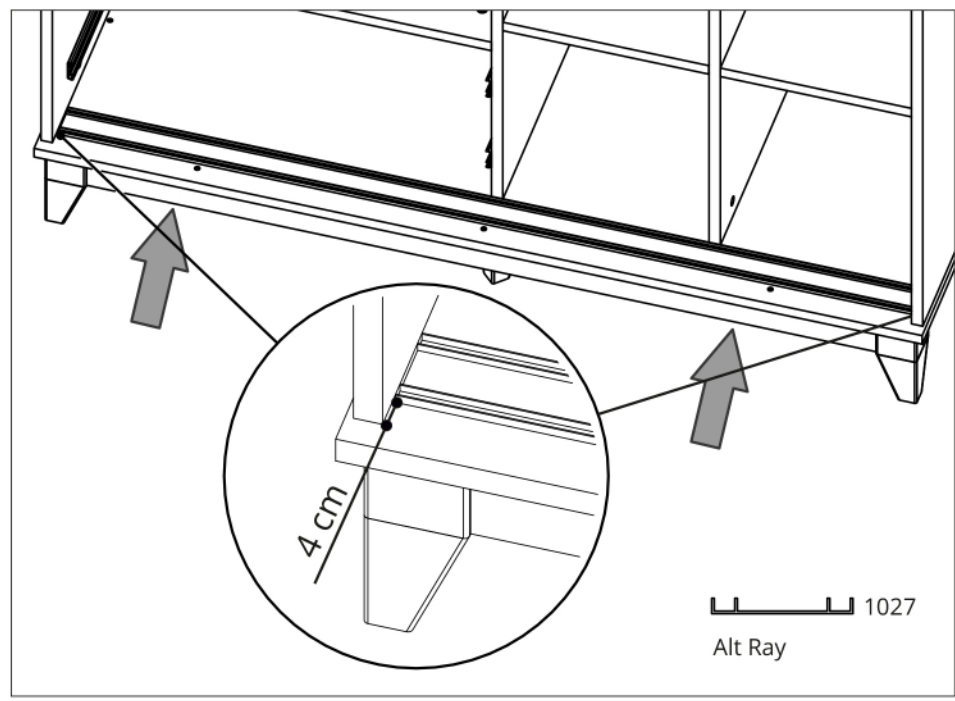


39

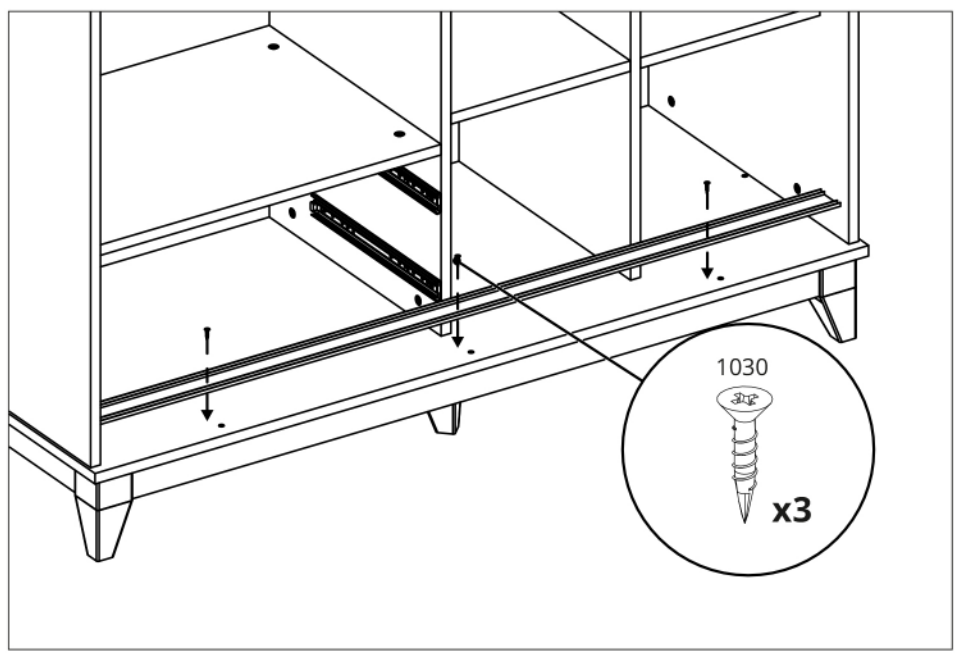




40


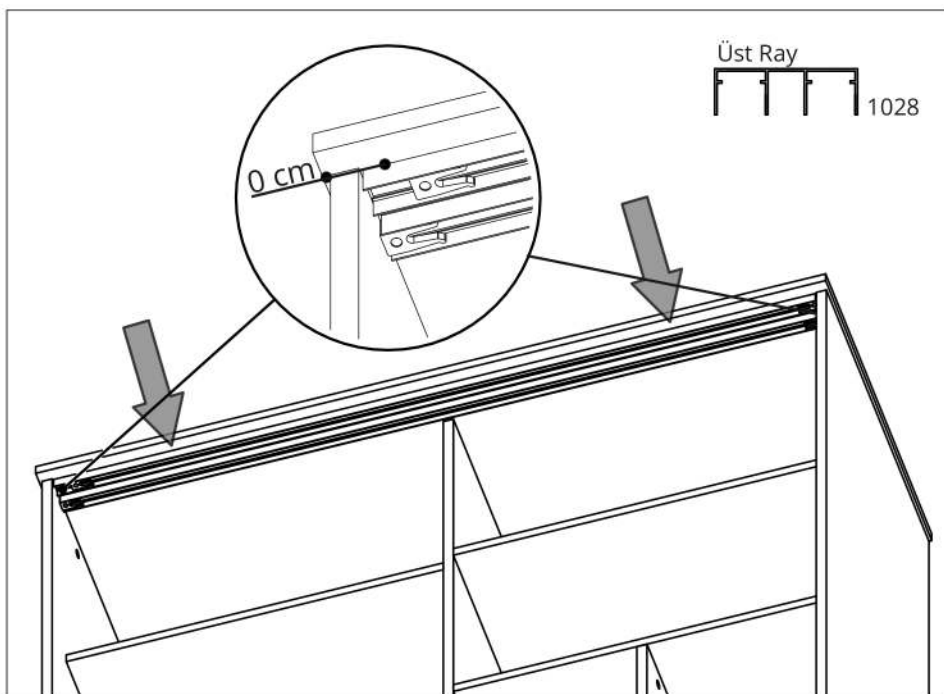


41

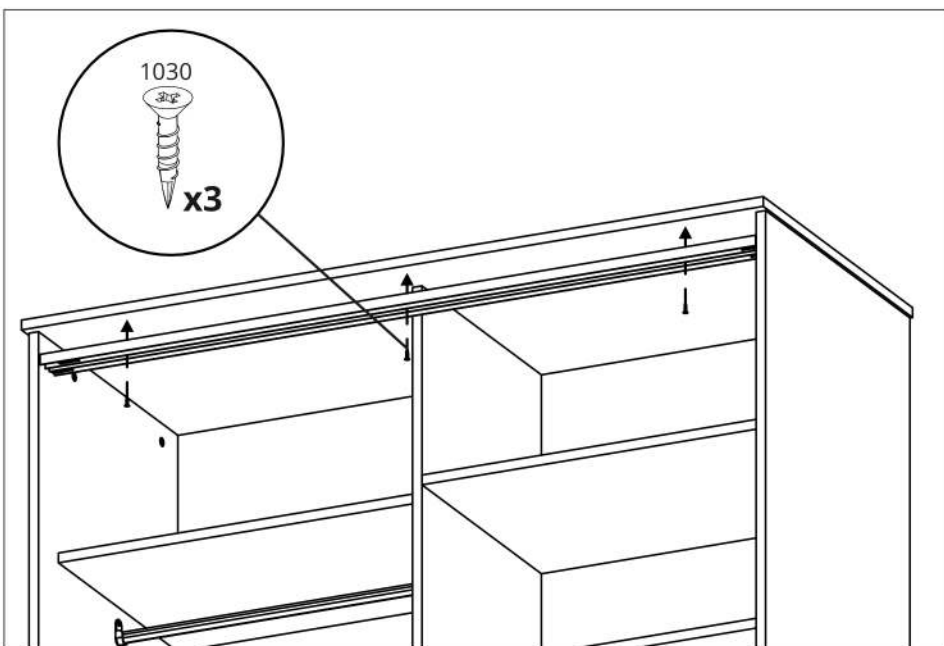


30


42

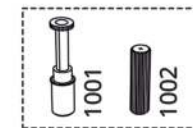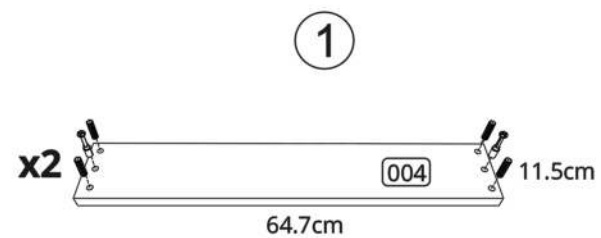



x4

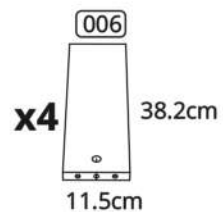

2

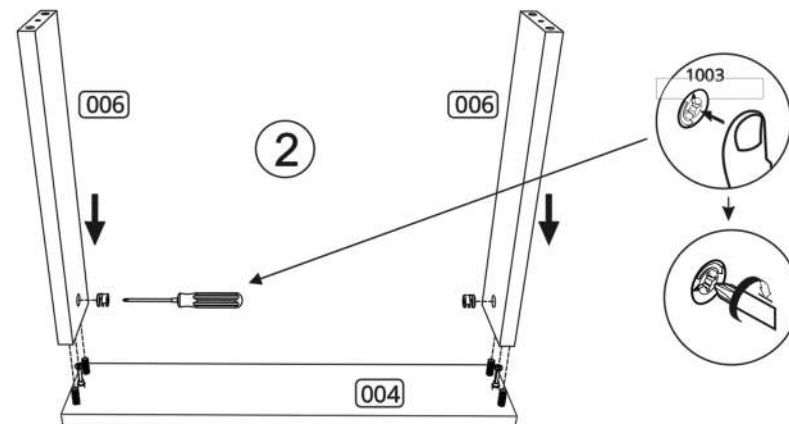


43

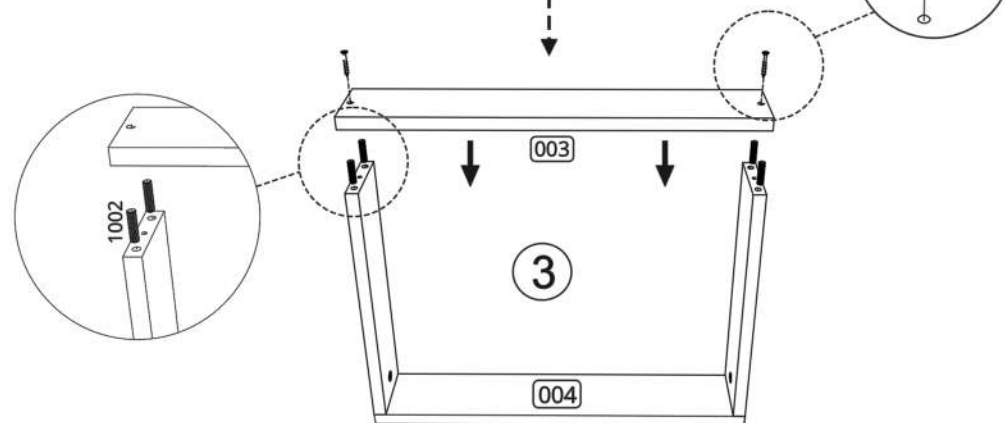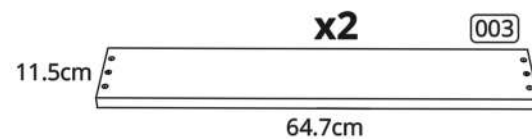


31


44

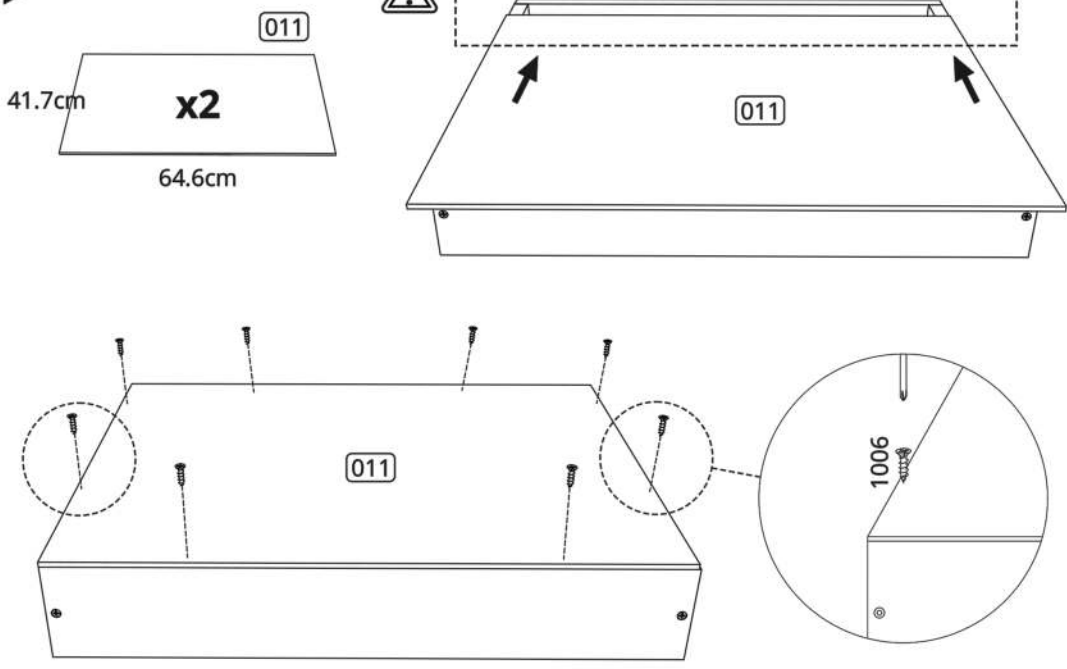


46

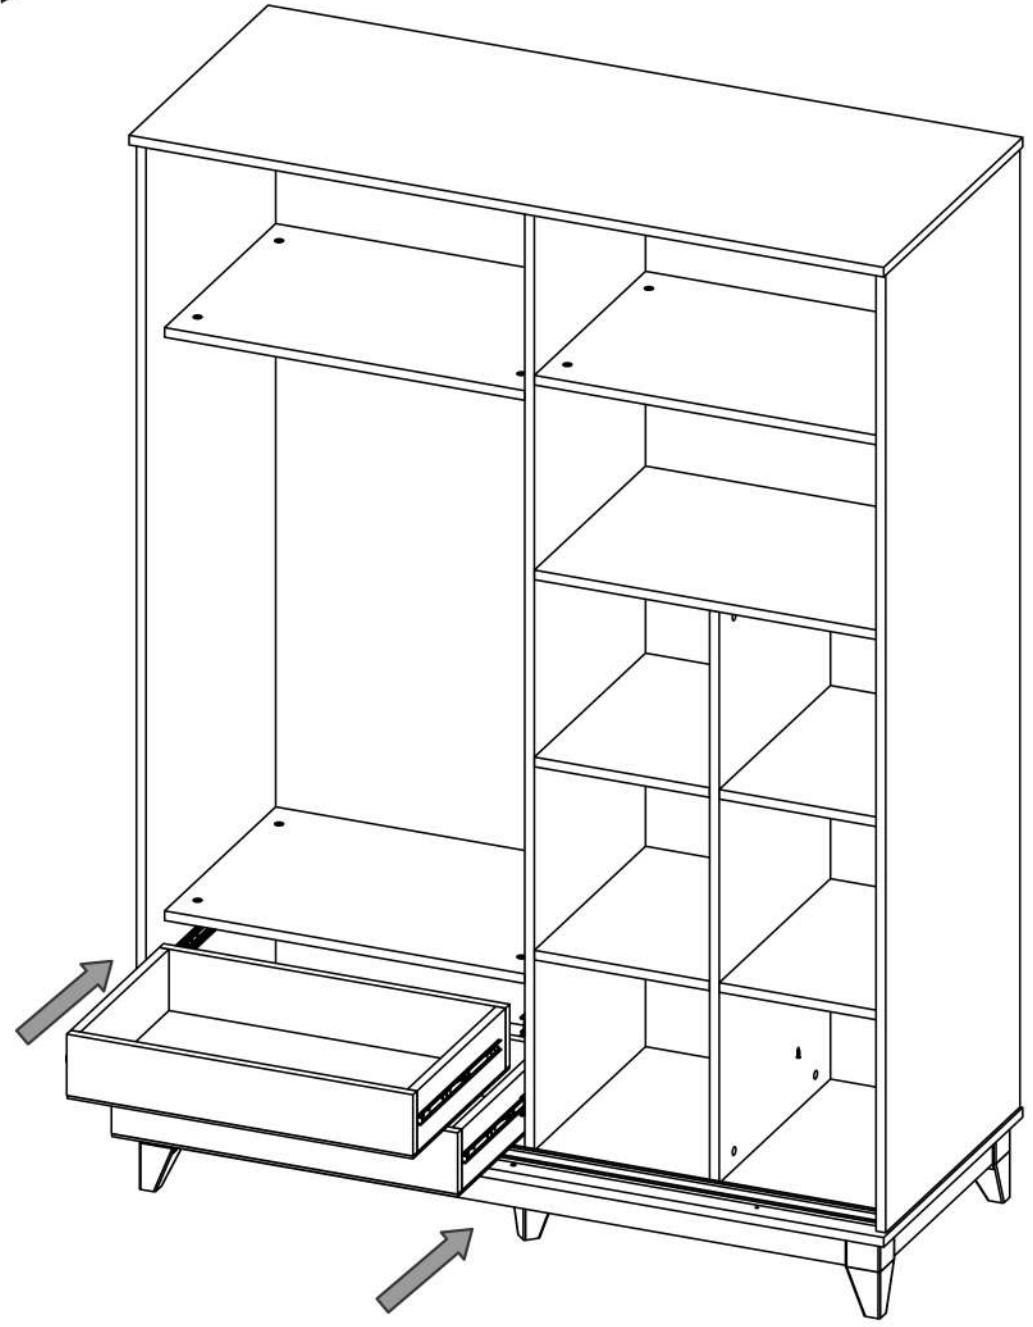


45

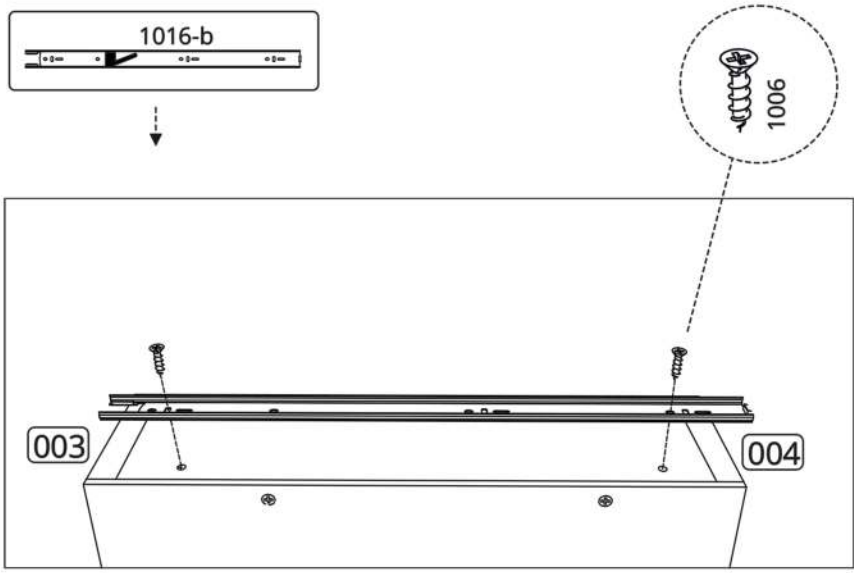


47

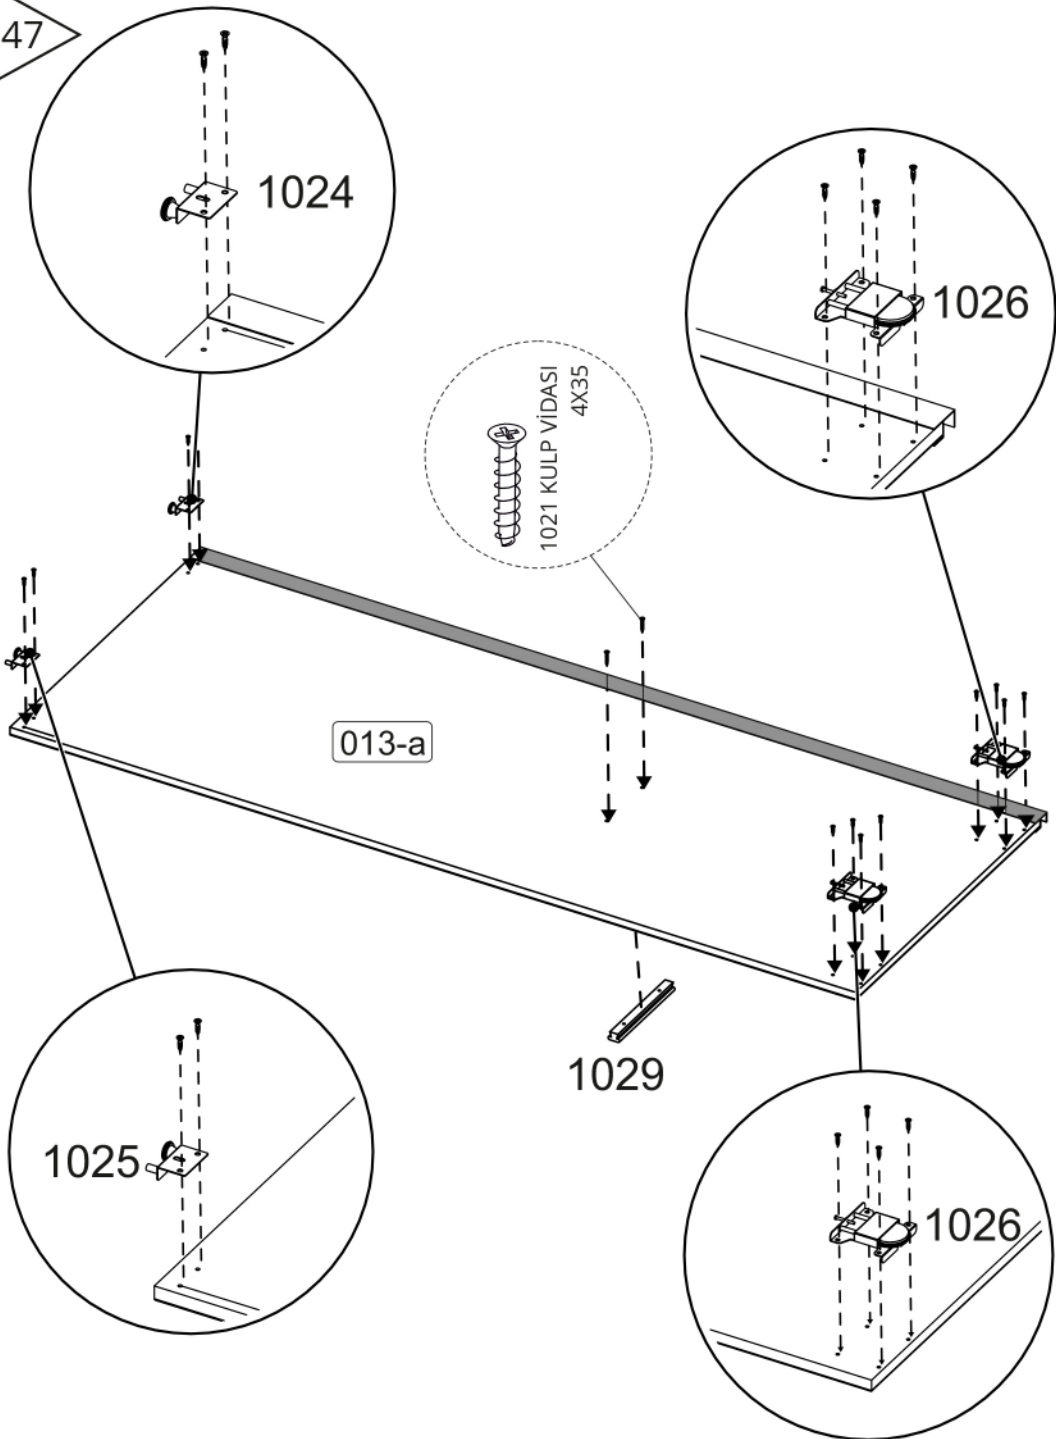

48

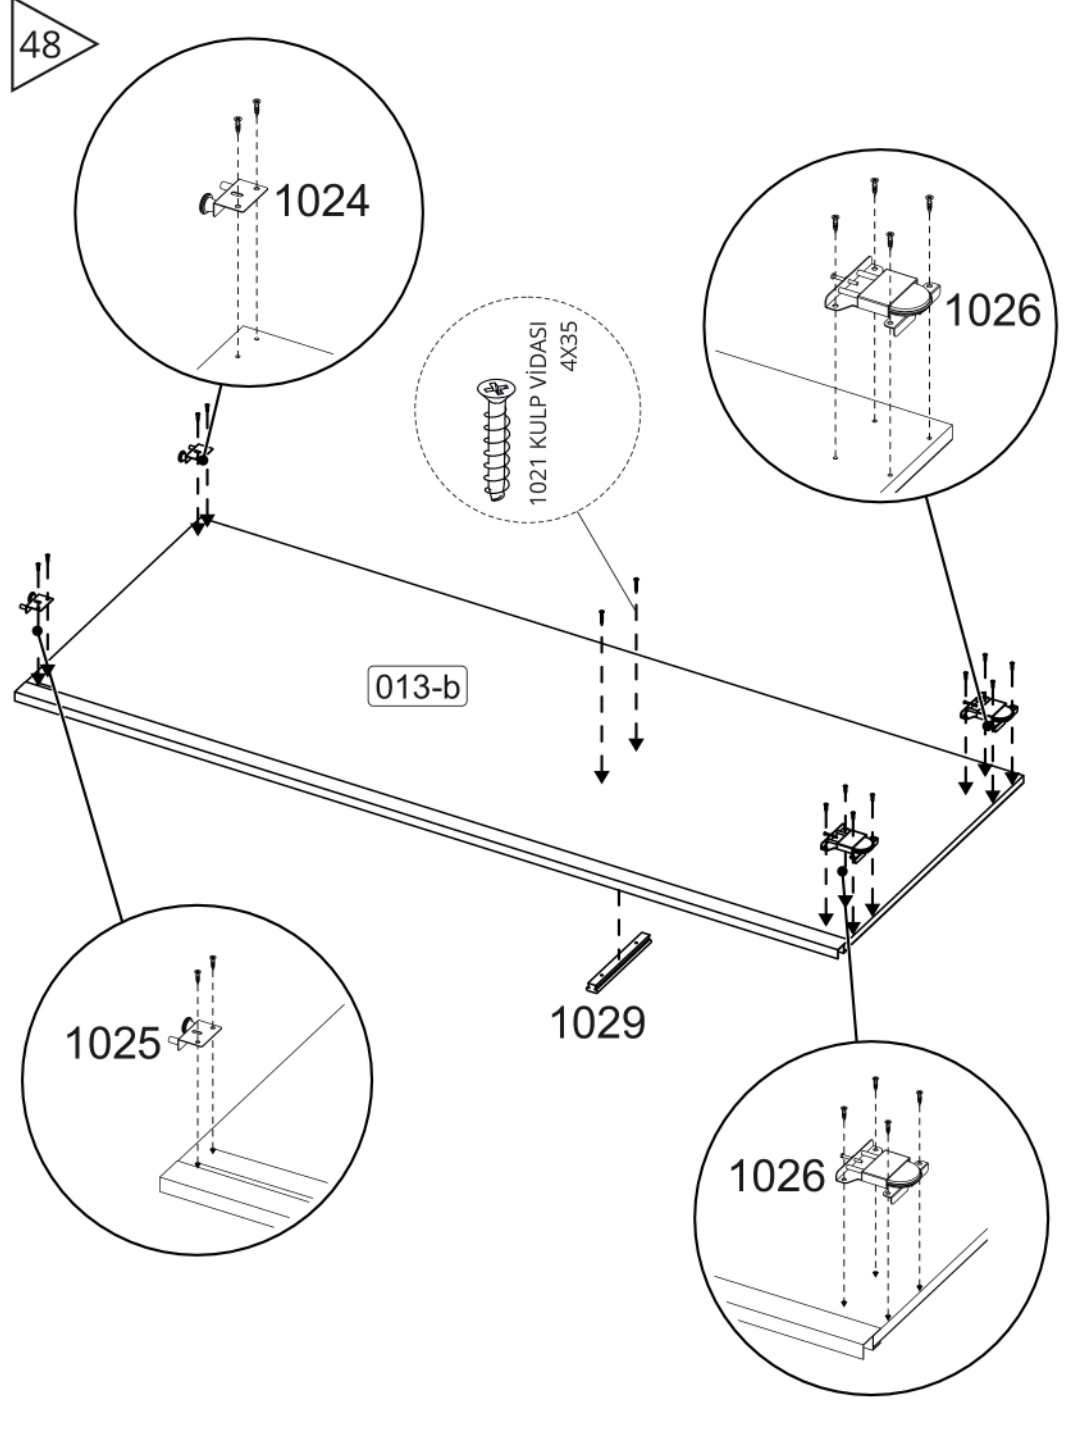


49

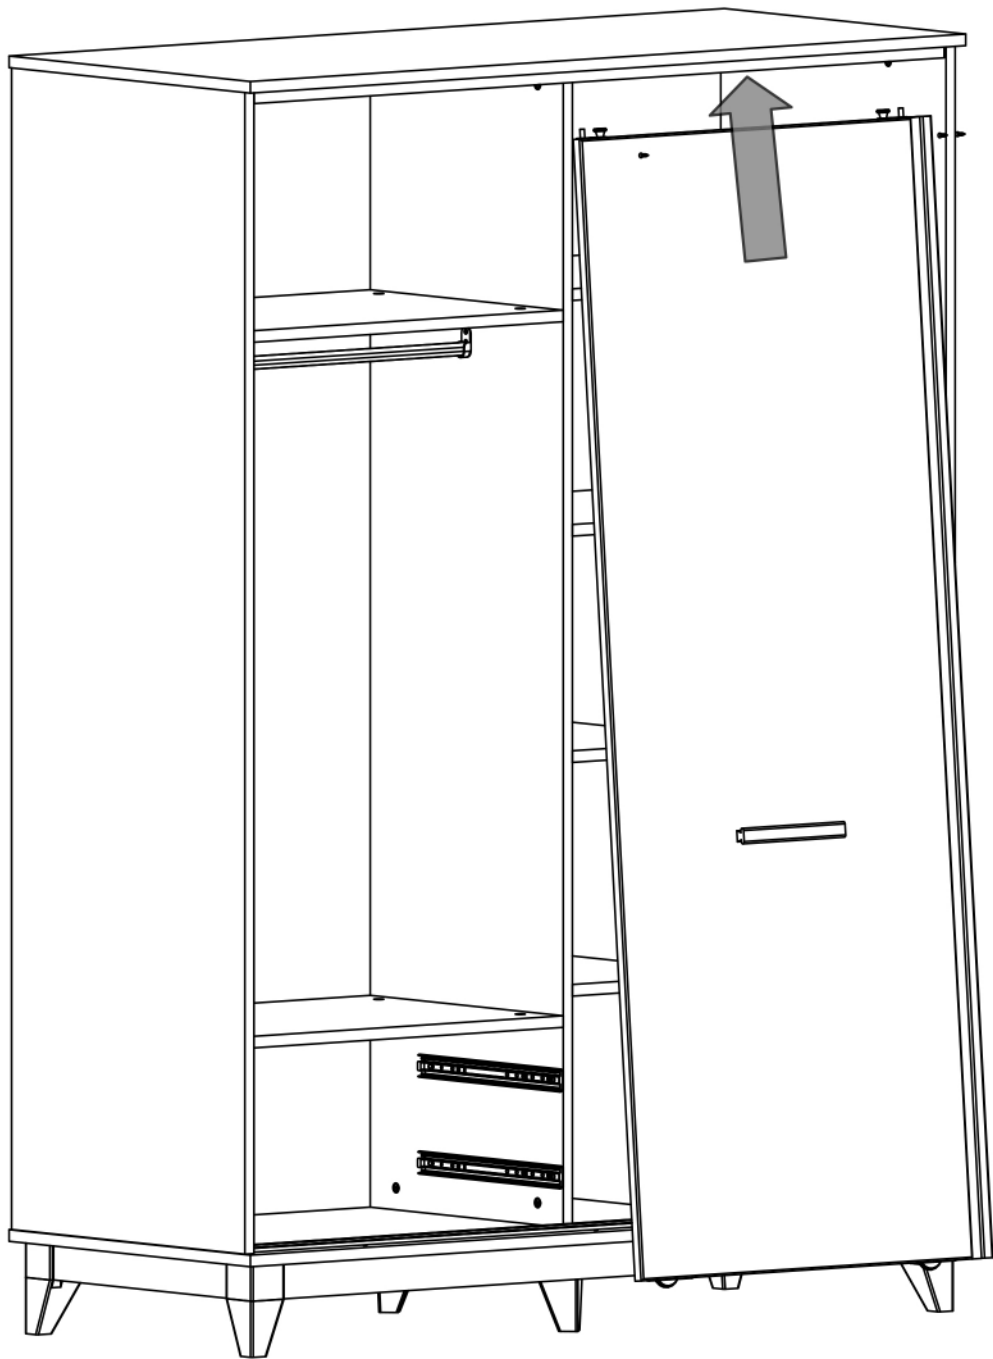


36

50

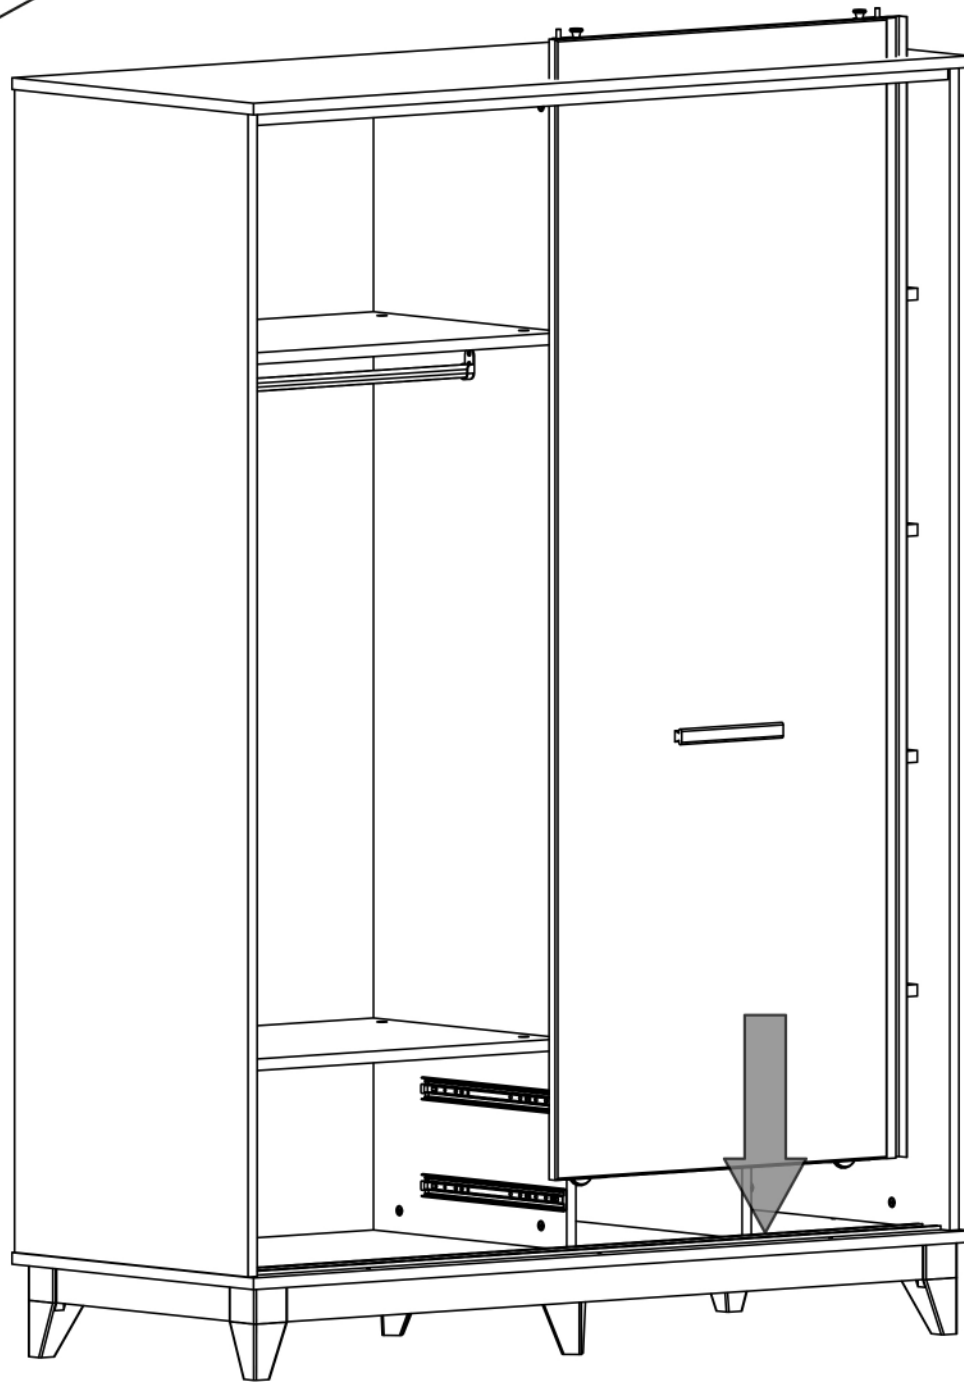


37

51

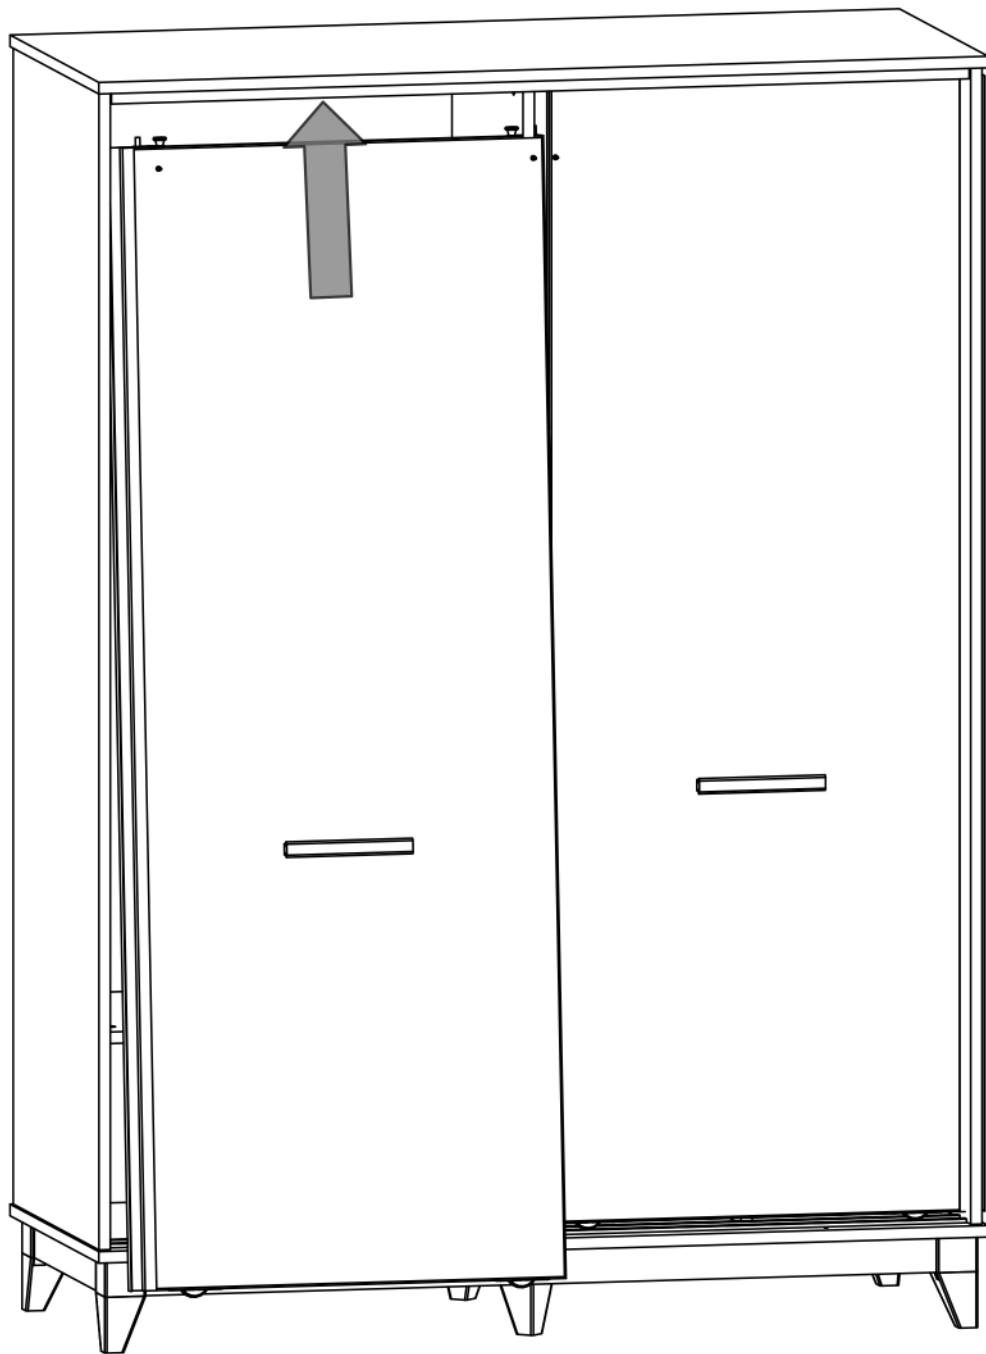


38

52

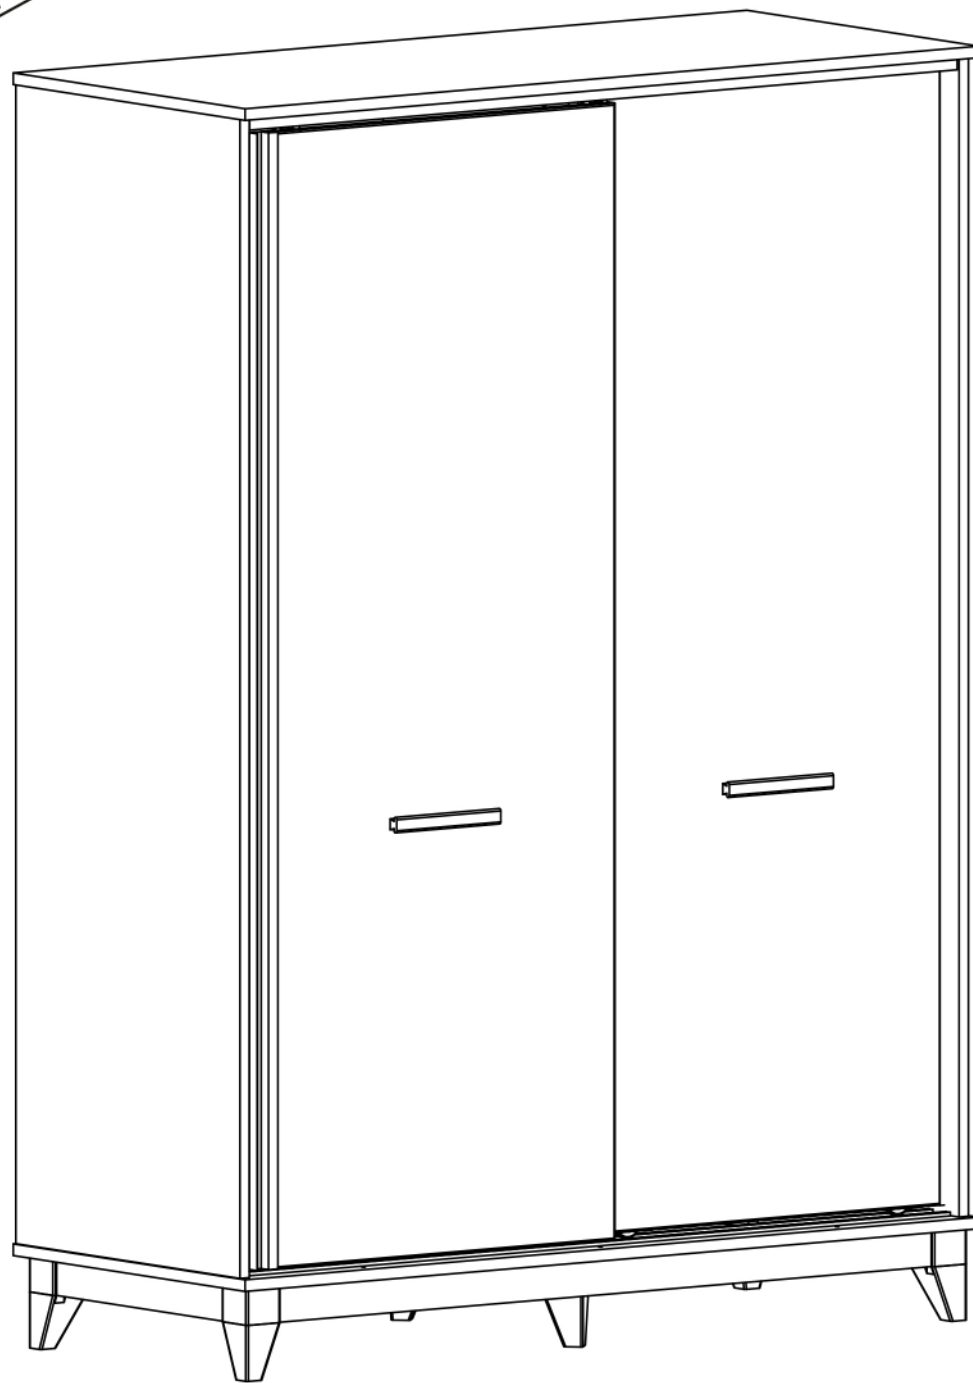

39

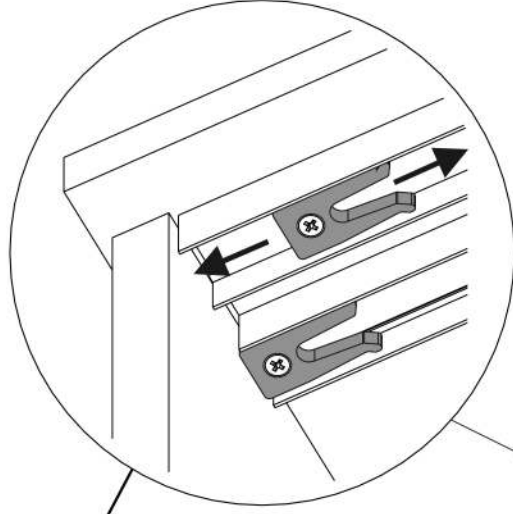

Üst raydaki frenleme plastiklerini gevşetip sıkarak kapağınızın ayarını yapabilirsiniz.

