

gm 088 - 6 DOOR WARDROBE



cabinet screw 6.3*50
36 pieces



shelf peg
36 pieces



screw 3,5*18
84 pieces



hanger flange
6 pieces



allen
1 piece



handle screw 4*30
12 pieces



allen closing pin
26 pieces



handle
6 pieces




outer cover hinge
6 pieces



middle cover hinge
12 pieces



nail
70 pieces

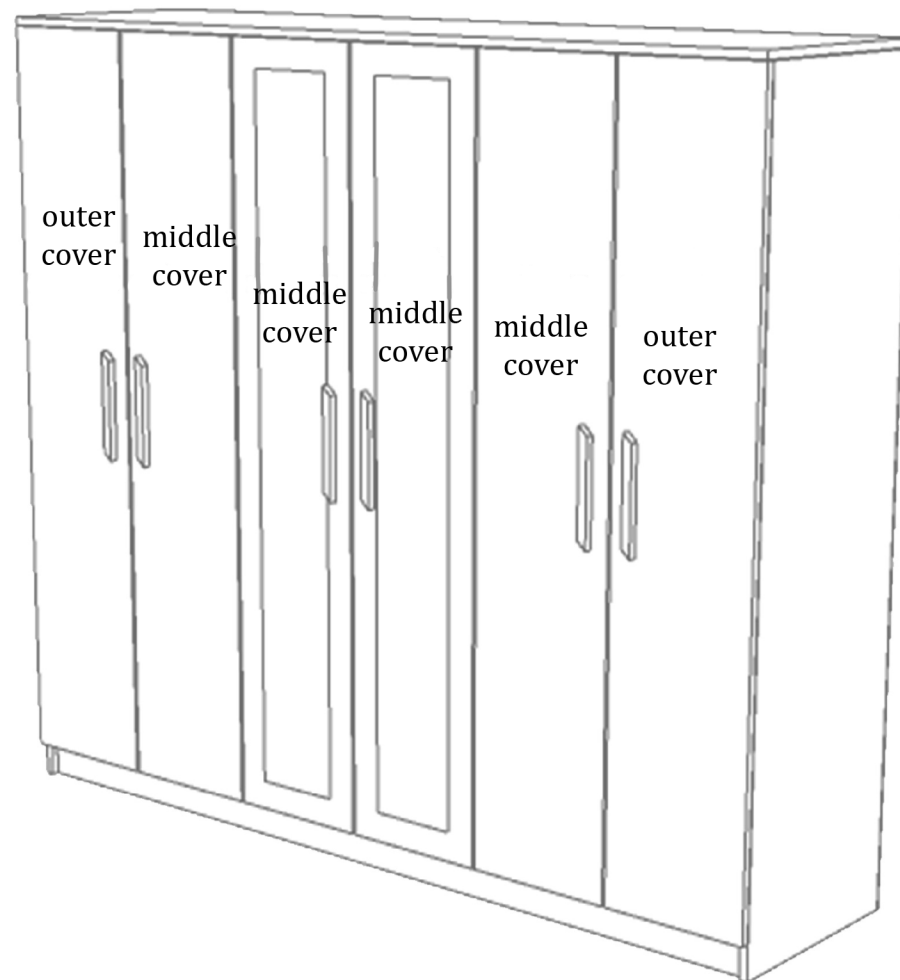

ATTACH THE MIDDLE DOOR HINGES TO THE MIDDLE DOORS WHILE INSTALLING THE HINGES. AND ATTACH THE OUTER DOOR HINGES TO THE OUTER DOORS.



DO NOT USE EXCESSIVE FORCE WHEN SCREWING IN THE HANDLES.




PLEASE INSTALL THE PRODUCT BY LAYING IT ON THE GROUND.

PLEASE SEE THE BACK PAGE TO INVESTIGATE THE INSTALLER STEPS.




STEP 1

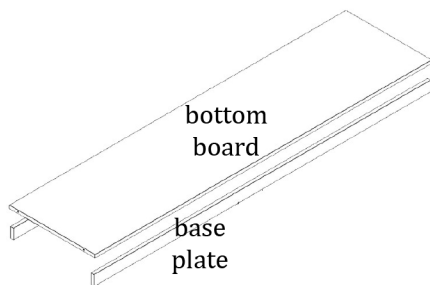


Screw the base plate to the bottom board.

STEP 2

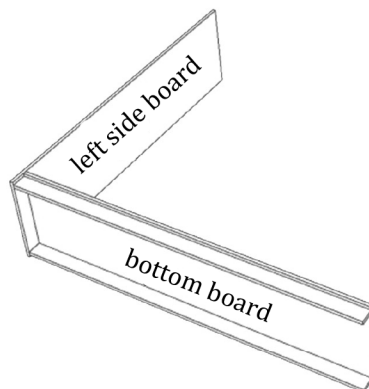


Screw the left side board to the bottom board.

STEP 3

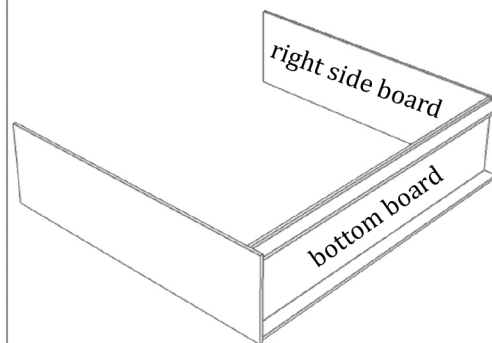


Screw the right side board to the bottom board.

STEP 4

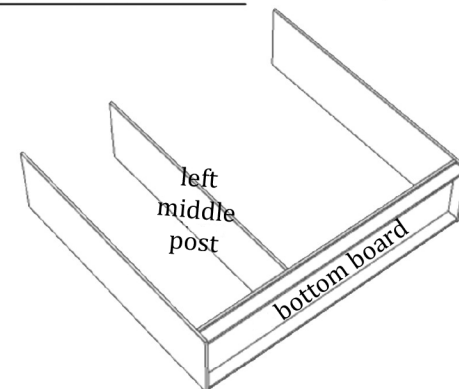


Screw the middle post to the bottom board.

STEP 5

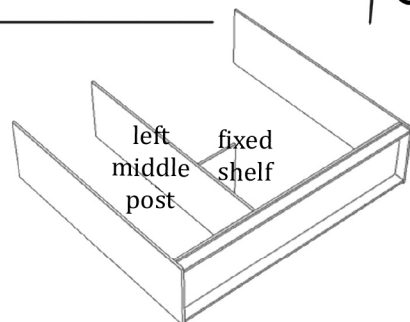


Screw the fixed shelf to the left middle post.

STEP 6

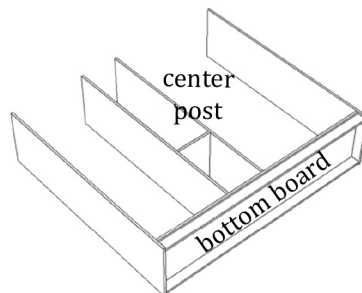


Screw the center post to the bottom board.

STEP 7

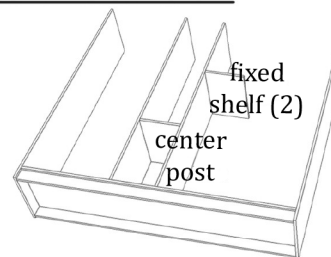


Screw the fixed shelf(2) to the center post.

STEP 8

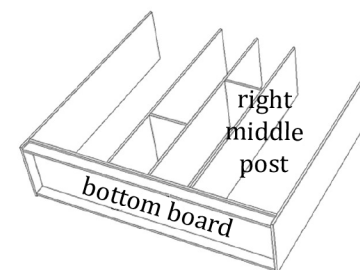


Screw the right middle post to the bottom board.

STEP 9

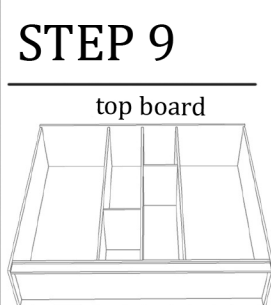

Screw the top board to the cabinet.


STEP 10

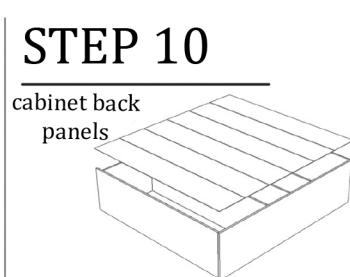

Carefully rotate the closet to behind its. Then nail the cabinet back panels.

STEP 11

Place movable shelves, hanger flanges and hanger pipes.

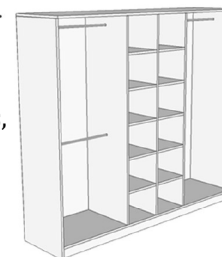

STEP 12

Screw the hinges first to the covers and then to the cabinet. Then screw the handles to the covers.

