




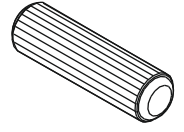
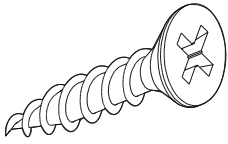
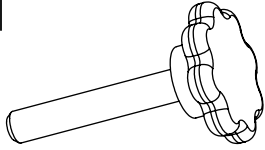


PRODUCT NAME **MVN3 CAR BED**


MODEL NUMBER **SLAT SYSTEM, LEATHER SEAT**

ASSEMBLY INSTRUCTIONS

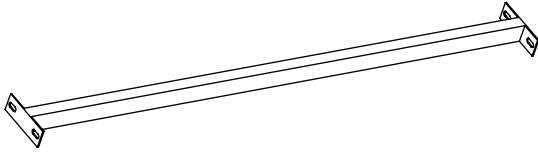

**A**MINIFIX NUT
x4 pc.**B**MINIFIX STUD
x4 pc.**C**MINIFIX WHITE
PLUG x4 pc.**D**DOWEL
x4 pc.**E**YSB SCREWS
M5x25 x28 pc.**F**BUTTERFLY BOLT
M6 x6 pc.**G**YSB SCREWS
M6x12 x4 pc.**H**


SLAT'S SUPPORT STEEL x1 pc.

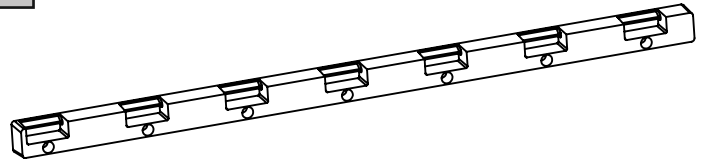I

SLAT'S SUPPORT x4 pc.


K

SLATS x14 pc.

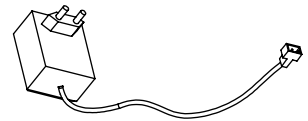


REMOTE CONTROL x1pc, ADAPTOR x1pc


1

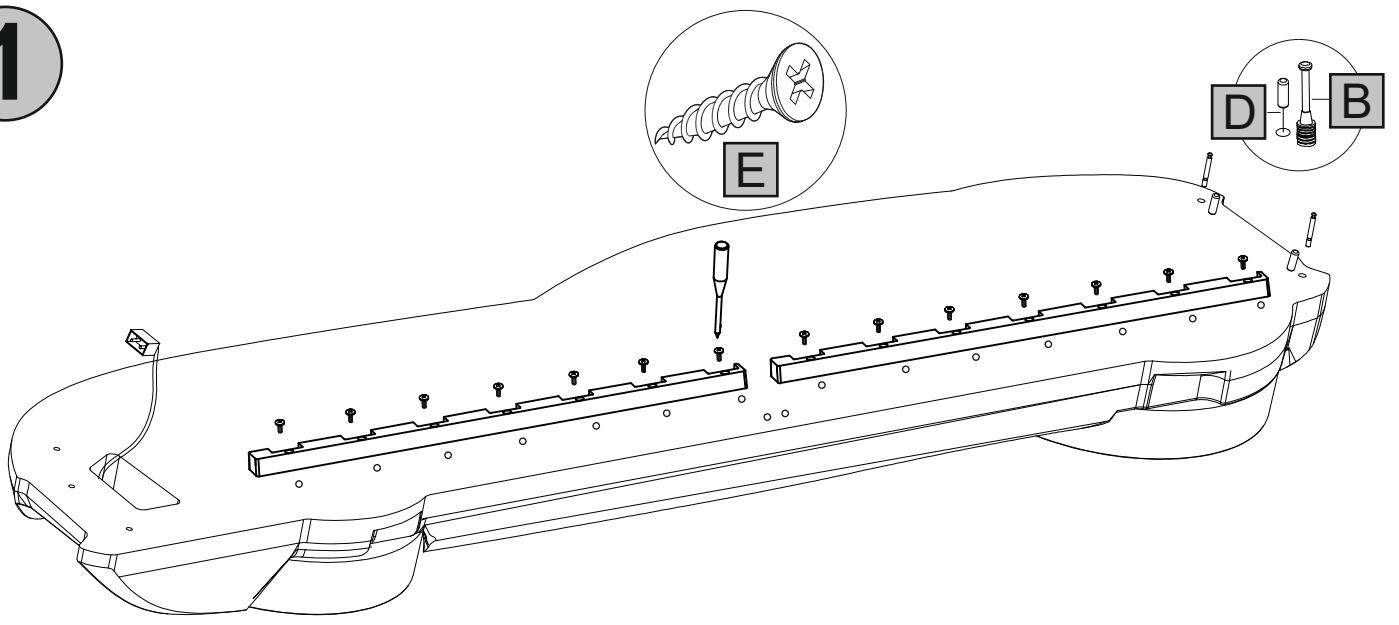


2

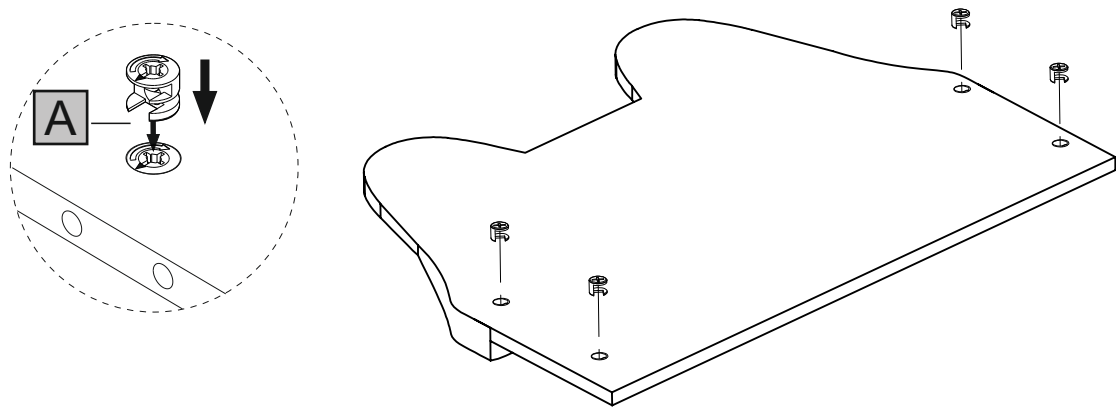

3

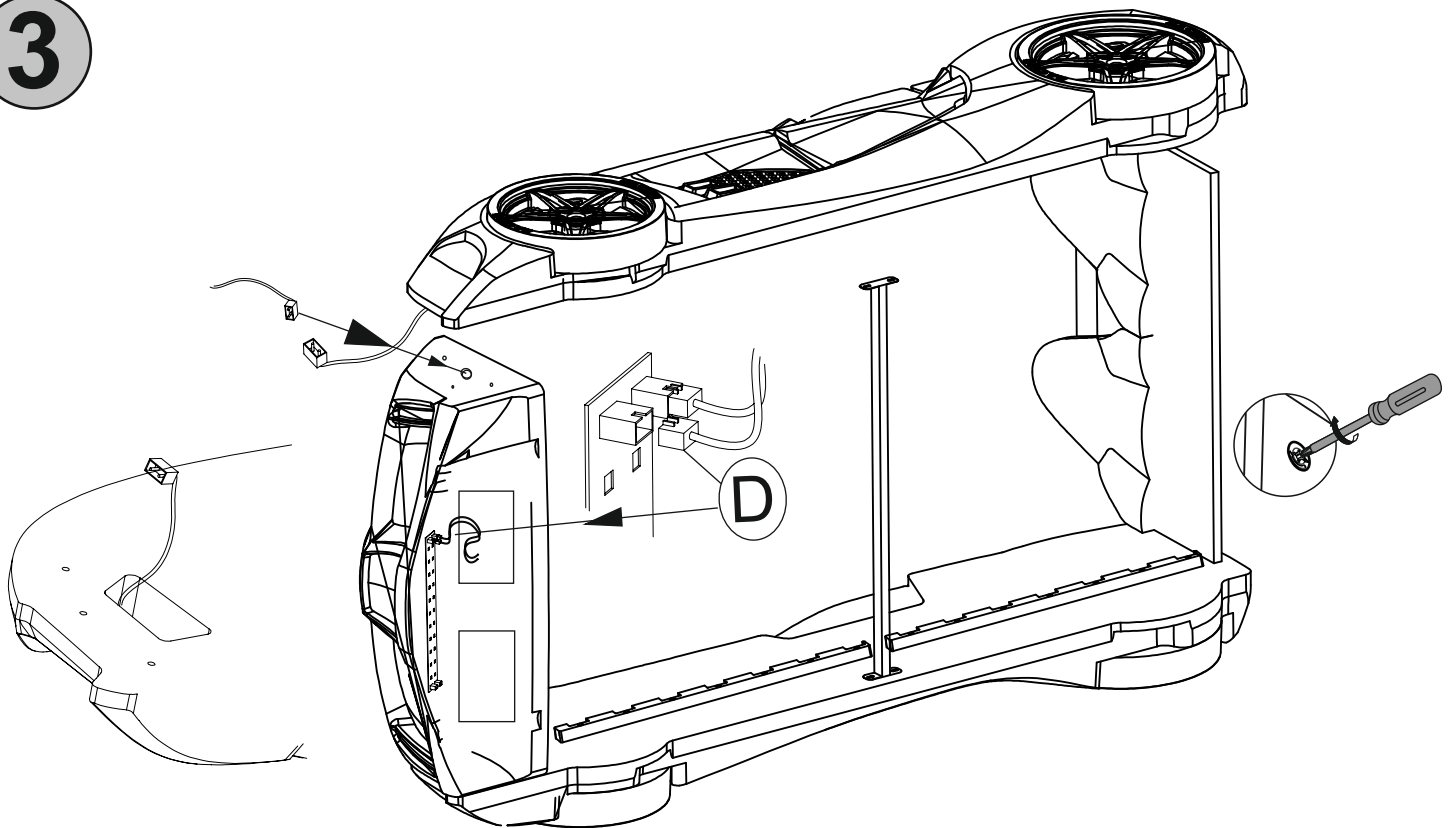

4

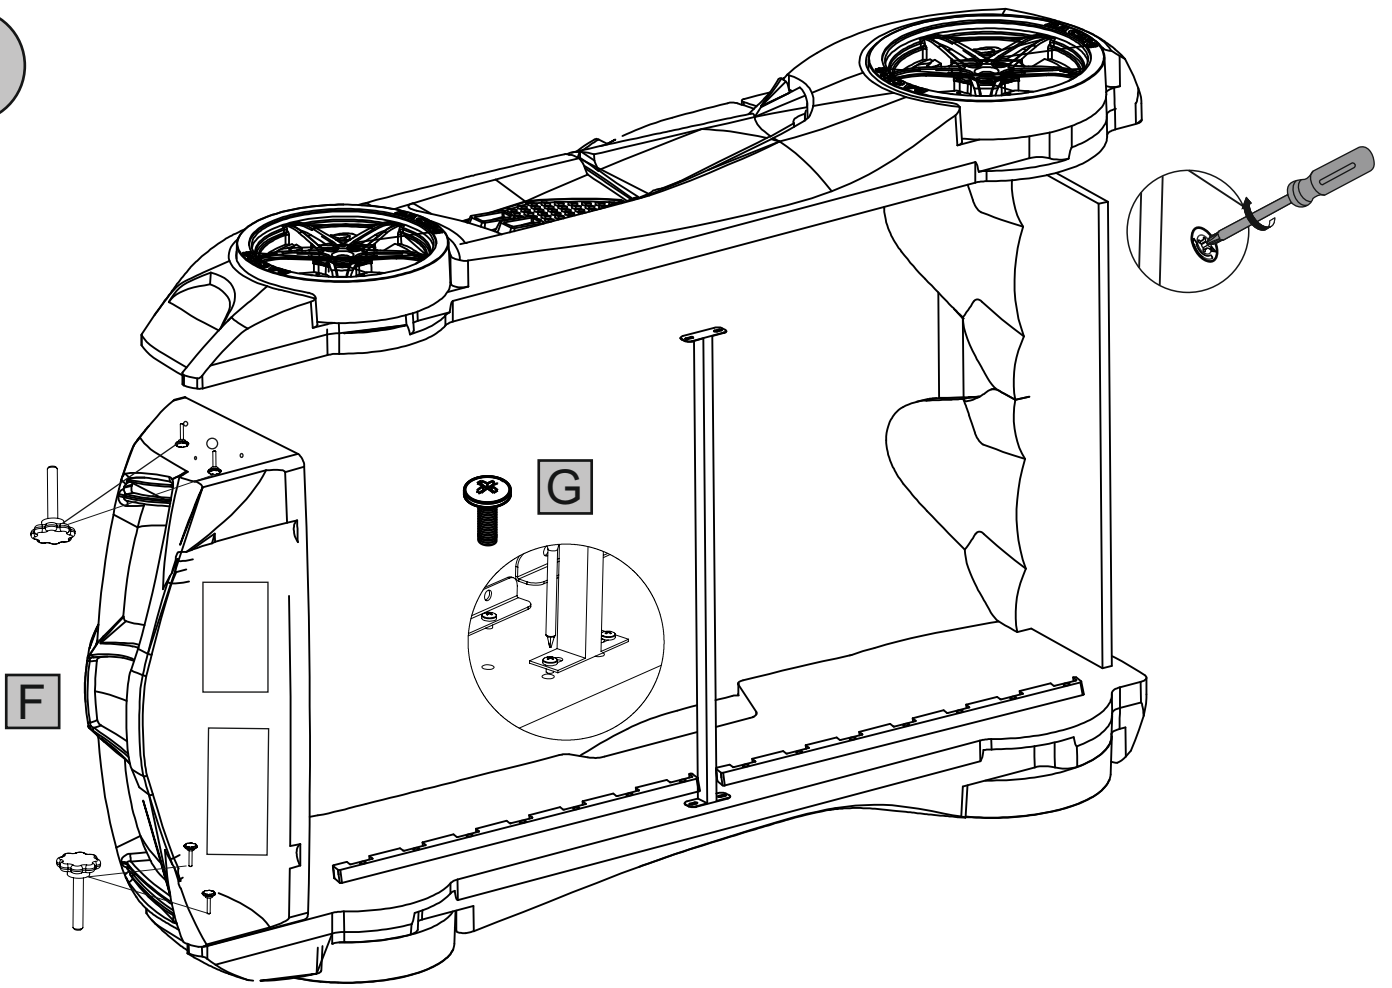

5

